

 
BATTERY-POWERED Tea Lights

WARNING!

- For indoor use only.
- This product contains small parts and is not a toy.
- Use only with adult supervision.

TURNING ON THE TEA LIGHT

- Remove the tea light from its holder and turn upside down.
- Pull the white strip completely out and discard.
- Push the blue ON/OFF switch once to turn the light on. Push the ON/OFF switch again to turn the light off.
- If the light does not turn on, press firmly on the battery compartment cover to ensure secure contact with the battery.

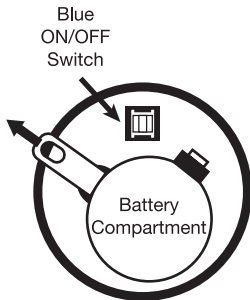

BATTERY REPLACEMENT

- Remove the tea light from its holder and turn upside down. See the diagram to the right.
- Remove the battery compartment cover by pressing the tab inward and pulling the cover up.
- Replace the battery with a new CR2032 3V lithium battery. Be sure to match the correct +/- polarity orientation. The positive end of the battery should face the bottom (open) end of the tea light.
- Replace the battery compartment cover so that it snaps back in place. Replace tea light into holder.



Note: Dispose of old batteries according to your local regulations. Do not dispose of batteries in fire since they may explode. Batteries may also be returned to MAXSA Innovations for recycling or proper disposal.

BATTERY-POWERED Tea Lights


TROUBLESHOOTING

Tea Light will not turn on:


- Make sure the white strip is completely removed.
- Make sure the battery compartment cover is completely pressed in.

Light was working but no longer illuminates:

- Replace the CR2032 lithium battery (see front for instructions).

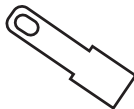

Pull out white strip and discard.

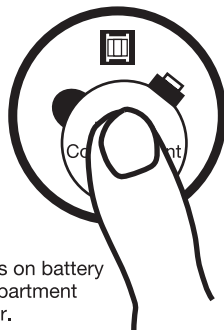

Press on battery compartment cover.

MAXSA®

MAXSA Innovations
8412 Cathedral Forest Drive
Fairfax Station, VA 22039
Tel: 703-495-0661
www.maxsainnovations.com

v7.1

©2007 MAXSA Innovations, LLC

MADE IN CHINA