

This unit has two modes: 1-input x 8-output and 2-input x 4-output. The default mode is 2 x 4. See Table 1 and Figure 1 for input and output connections for both modes.

Table 1. Inputs and outputs corresponding to modes

Mode	Inputs	Outputs
1 x 8	IN 1	Any
2 x 4	IN 1	Any OUT 1
	IN 2	Any OUT 2

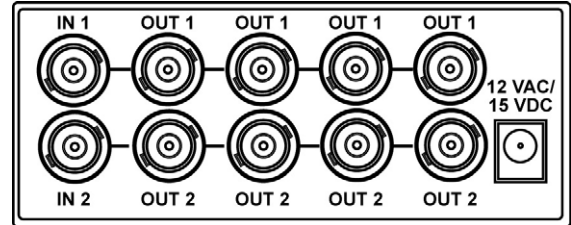


Figure 1. Input and output connections

SELECTING A MODE

- 1) Remove the two cover screws on the bottom on the unit. See Figure 2.
- 2) Slide the cover forward.
- 3) Locate the mode selector switch on the circuit board. See Figure 3.
- 4) Slide the switch so that it lines up with the appropriate mode (1 x 8 or 2 x 4). See Figure 3.
- 5) Reinstall the cover and cover screws. 🧑‍🔧

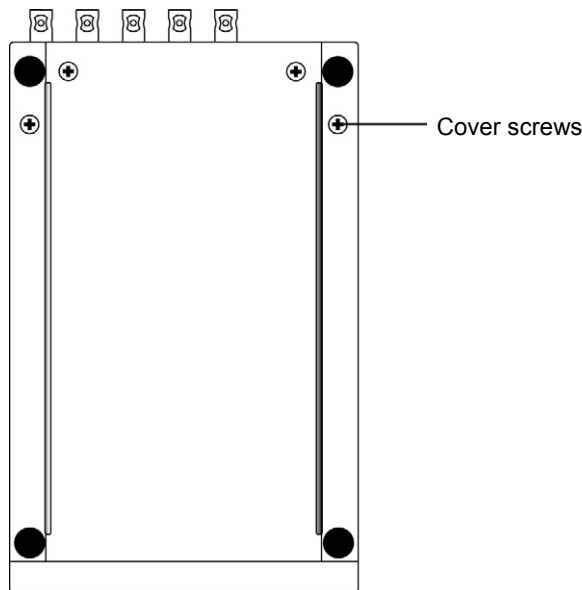


Figure 2. Remove the cover screws

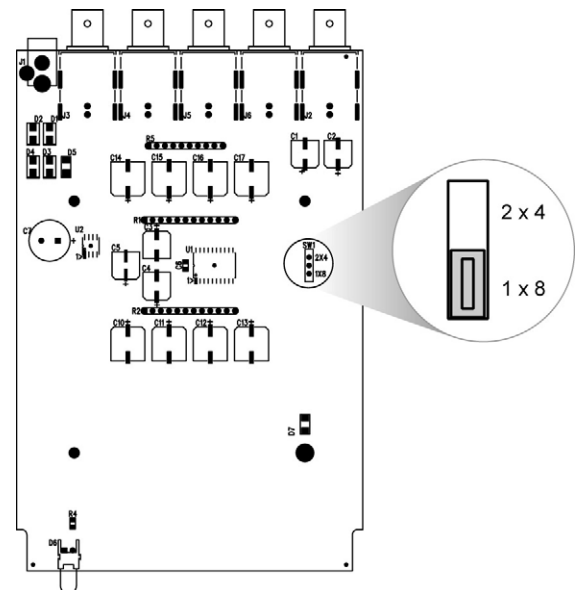


Figure 3. Mode selector switch on the circuit board