

XPT Transmitter Base (for use with plug-in keypads)

Installing the XPT Transmitter Base

In a standard single gang wall box, connect the Black wire from the XPT Base to 120V AC Live and connect the White wire to Neutral, using the included wire nuts. Make sure no bare whiskers of wire are protruding, use insulation tape to cover if necessary.

Note: The XPT does not switch any loads, it is a transmitter only.

After you have secured the transmitter to the box, set the House and Unit code dials to the desired settings. The red House Code dial should be set to match the receiver modules that you want to control. The black Unit Code dial should be set to the first of four sequential commands.

 
Note: if you are only controlling one device, as with an XP1 Keypad, the Unit Code that you set it to will be the unit number transmitted. If you use an XP4 Keypad, the first command will be the unit number that the XPT is set to, and the next three commands will be sequentially above.

Note, the XPT automatically monitors the power line for noise and other signal transmissions and will not transmit until the line is clear.

Place the desired Keypad cover onto the XPT Base by inserting the tab on top of the Keypad under the notch on the XPT Base. Gently press the bottom of the Keypad into place so that the pins on the back of the Keypad insert into the XPT Base socket.

A variety of Keypads are available allowing each installation to be customized:

- XP1: 1 button 1 address On/Off
- XP1A: 1 button 1 address All Lights On/All Units Off
- XP2: 2 button 2 address On/Off
- XP2D: 2 button 1 address On/Off, and Bright/Dim
- XP4: 4 button 4 address On/Off
- XP4D: 4 button 3 address On/Off, and Bright/Dim
- XP4A: 4 button 3 address On/Off, and All Lights On/All Units Off

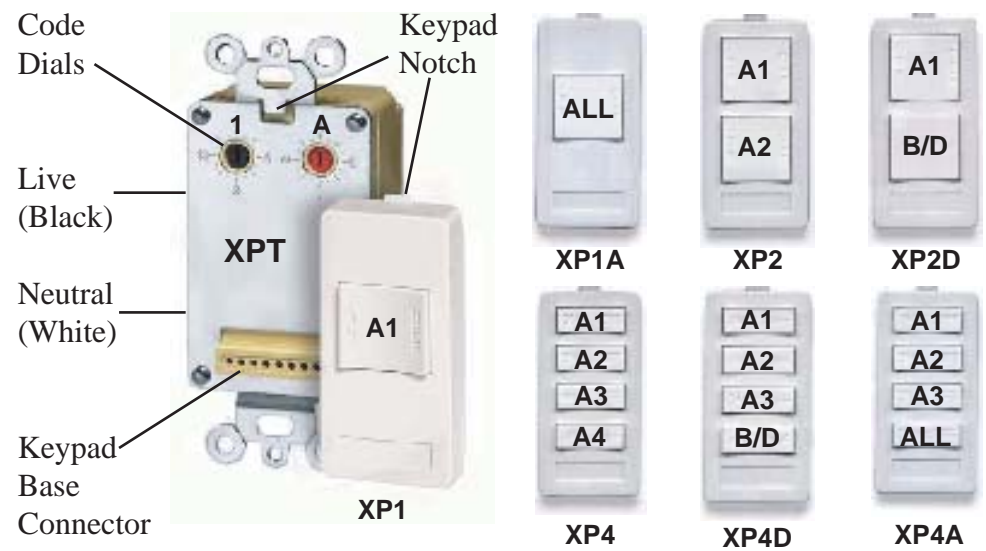

X10 Wireless Technology, Inc. Limited 90 Day Warranty

X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants X10 products to be free from defective material and workmanship for a period of 90 days from the original date of purchase at retail. X10 agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10 within the warranty period and with proof of purchase.

If service is required under this warranty:

1. Call 1-800-675-3044 or e-mail sales@x10.com or visit www.x10.com, to obtain a Return Merchandise Authorization (RMA) number.
2. Return the defective unit postage prepaid to X10 (see address on back).
3. Enclose a check for \$4.00 to cover postage and handling.
4. Enclose a dated proof of purchase.
5. X10 is not responsible for shipping damage. Units to be returned should be packed carefully.

Please visit www.x10.com/warranty to complete your on-line warranty registration. Thank you.

XPT-4/12

X10 Wireless Technology, Inc.
400 Forge Way, Suite 409-412,
Rockaway, NJ 07866

RMA#

Tear off and keep the portion to the right (setup instructions are on the other side of it) and keep for future use.

**Call 1-800-675-3044 or e-mail sales@x10.com
or visit www.x10.com, to obtain a Return Merchandise
Authorization (RMA) number.**

Write your RMA number above. Tear off and tape this label to the outside of the package and mail it (postage prepaid).

Trim

Mini Timer MT13A

A Controller, Timer and Alarm Clock all in one! Programs up to eight X10 Modules to go on and off at specific times, up to a total of 64 timed events. Controls eight modules instantly. Dims lights too.

Maxi Controller SC503

Lets you control up to 16 X10 Modules at the touch of a button from anywhere in the house. Dims lights too!

Mini Controller MC10A

Lets you control up to eight X10 Modules at the touch of a button from anywhere in the house. Dims lights too!

2-Way Home Control Interface CM15A

Set up from a PC to control up to 256 X10 Modules. ActiveHome Pro software download & USB cable included.

Thermostat Set-Back TH2807

Automatically sets-back your central heating/air conditioning. Mounts on the wall under your existing thermostat and plugs into an Appliance Module.

Wireless Remote Control System RC5000

Lets you control 16 X10 modules from inside or outside your home. Can also dim and brighten Lamp Modules and Wall Switch Modules. Works with the HR12A PalmPad Remote and X10 RF Wall Switches (SS13A, SS15A).

Lamp Module LM465

Can be Dimmed and Brightened from any X10 Controller. Responds to "All lights on". Rated for 300 W. Incandescent only.

2-Way version LM14A.

SocketRocket LM15A

Screws into an existing light fixture. Controls up to 150W, incandescent only.

Appliance Module - AM486/AM466

Two pin polarized (AM486) or 3 pin grounded (AM466). For controlling an air conditioner, TV, stereo, etc. anywhere in the home. Rated 15A for heaters, coffee pots etc.; 1/3 H.P. for motors; 400W for TVs; 500W for lamps. *2-Way versions available AM14A (2 pin), AM15A (3 pin).*

Wall Switch Module WS467

For controlling important indoor and outdoor security lights. Replaces your existing wall switch and installs like a regular dimmer. Dimmed/brightened from any X10 Controller. Rated 500W incandescent only.

3 - Way Wall Switch Module WS4777

For controlling a light which is controlled by two switches. Same features as WS467.

Split Receptacle Module SR227

Replaces existing wall outlet. The top outlet functions like an Appliance Module, the bottom one is a regular outlet. Rated 15A.

Universal Module UM506

Isolated contact relay and beeper. Can be set for momentary or continuous operation. Not compatible with X10 security systems.

Trim