

KEYCHAIN / WALLMOUNT TRANSMITTER

Model WM-201

1. INTRODUCTION


In this package, you will find a transmitter with 12V alkaline battery, a mounting bracket, a double-sided foam tape.



2. PROGRAMMING TRANSMITTER TO THE SWING DOOR OPENER

Follow the instructions below to program transmitter into the Swing Door Opener model DM-001:

1. The door opener should be in standby mode, i.e. adapter plugged in but the swing door opener should not be operating, only the red LED should be on steadily.
2. Press and hold the "Learn" button, the red LED will start to flash and buzzer will beep indicating the door opener is in learn mode.
3. Press and hold the button on the transmitter you would like to program while you are holding onto the learn button on the door opener, you should hear a long beep and the red LED will be off.
4. You may now release the button on the transmitter and the learn button on the door opener and the red LED will be on steadily. You have now successfully programmed the transmitter to the door opener.

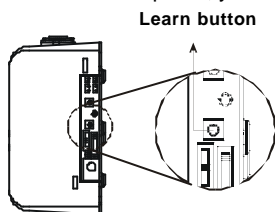

You can program up to 15 single button transmitters to the swing door opener or 7 Model WM-201 transmitters. This is ideal if you have multiple users for one door and they can carry their own transmitter.

3. OPERATION

There are 2 types of operating modes:

- 1) Toggle
- 2) Open / Close

1) Toggle


When the door is open, pressing the programmed button will close the door. When the door is close, pressing the programmed button will open the door. When the door opener is operating, the orange LED will flash and the buzzer will beep.

2) Open / Close

- Pressing the top button will open the door
- Pressing the lower button will close the door

Please refer to the user's instructions of the swing door opener for details regarding different operating modes.

If you would like to stop the door when it is either opening or closing, you can press the programmed button again, it will stop the door opener therefore stopping the door from opening / closing.

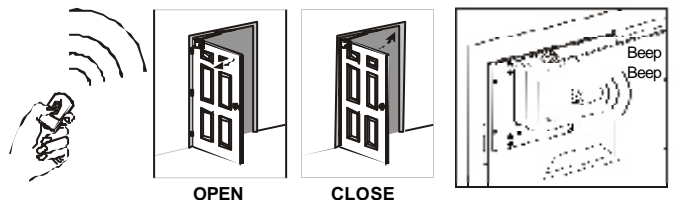

4. INSTALLATION

The transmitter can be used as a wall mount button. You can mount the transmitter onto the wall near the door exit with the provided mounting bracket and double-sided foam tape. Apply the double-sided foam tape to the wall and it is smooth and clean enough to provide a good adhesive surface.



5. TROUBLE SHOOTING

Q: The door opener does not response after pressing the button on the transmitter.

- A: - Ensure when the button is pressed on the transmitter, the red light on the transmitter comes on. Otherwise, check if the battery is inserted properly.
- Ensure the door opener is power up.
 - Program the transmitter again. Refer to "Programming Transmitter to the Swing Door Opener" section.

6. ERASE PROGRAMMED TRANSMITTER(S)

Programmed transmitters can be erased by following the instruction below:

1. Unplug the door opener when it is in standby mode.
2. Press and hold the learn button, then plug the adapter back in while holding the learn button.
3. You should see the red LED flashing and buzzer beeping rapidly. This indicates all the transmitters have been erased and you may release the learn button. You may now release the learn button.

Note: When performing the erase operation, all the programmed transmitters will be erased. This operation cannot erase an individual transmitter.

7. BATTERY

12 volt alkaline battery (size 23A) included. It is time to change the battery when the red LED on the transmitter does not turn on when either button is pressed.



8. ADDITIONAL DOOR OPENER

If the swing door opener operates in toggle mode, the other button on the Model WM-201 can be used to operate another swing door opener operating in toggle mode. That means one remote can operate 2 swing door openers.

9. FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

10. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

11. CUSTOMER SERVICE

If you would like to order Skylink's products or have difficulty getting them to work, please :

1. visit our FAQ section at www.skylinkhome.com, or
2. email us at support@skylinkhome.com, or
3. call our toll free at 1-800-304-1187 from Monday to Friday, 9 am to 5 pm EST. Fax (800) 286-1320

CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3
Email: support@skylinkhome.com
<http://www.skylinkhome.com>
P/N. 101A411-001
US Patent D380895, 6243000B1
©2006 SKYLINK GROUP