

AUTOSLIDE

Setting Up your AutoSlide Pet Mats


LSG0 12.15.20



Pet Mat with Cable and Wireless Transmitter



Wireless Transmitter
(1x per Pet Mat)

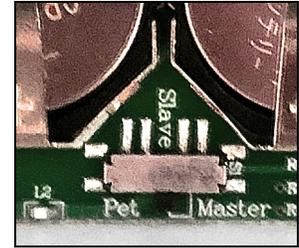

Wireless Transmitter
(sensor setting switch)

Installation:

1. Your AutoSlide unit should already be installed and programmed. Remove the cover of your AutoSlide unit.
2. Plug the Pet Mat's cable into the Wireless Transmitter. Be sure to remove the plastic tab from the Wireless Transmitter before using.
3. Press Sensor Learn on your AutoSlide control panel - the red light by this button will light up and stay lit.
4. Step on the Pet Mat to trigger it. If done correctly, a blue light will flash on the Wireless Transmitter.
5. Repeat steps 3 and 4 (press Sensor Learn again then trigger the Pet Mat again).
6. Wait a few moments, then confirm the Pet Mat is paired to your unit by triggering it to open the door.

(A video of this process and changing the batteries of the transmitter can be found on our YouTube channel, [Autoslide USA Tech Help](#))

Protection Advice:

- Pet Mats should always be placed underneath or inside a protective covering such as a rug, doormat, or carpet.
- When placed outdoors or in extreme temperatures/humidity, it is best to protect the Wireless Transmitter from the elements with a shield or casing.
- The point where the Pet Mat cable enters/attaches to the Pet Mat already comes well insulated, but be sure to keep this portion away from any humidity, possible elemental wear, or risk of physical damage.
- For extra protection on an outdoors mat, tape the edges of the mat to the ground.

Notes:

- There is a switch on the motherboard of the Wireless Transmitter to control which sensor on the unit the pet mat triggers:
 - Setting the switch to **Pet** will make the pet mat trigger the Pet Sensor on the unit, which will only work when the unit is in Pet Mode (if Pet Mode has already been programmed).
 - Setting the switch to **Slave** will make the pet mat trigger Outside Sensor on the unit, which will enable it in only Green and Pet Mode.
 - Setting the switch to **Master** will make the pet mat trigger Inside Sensor on the unit, which will enable it in Green, Red, and Pet Mode.
- Each Pet Mat transmitter takes four CR2016 batteries.

Troubleshooting:

- If your Pet Mat is not responsive but the blue light on the Wireless Transmitter is flashing, make sure the unit is in the correct mode for the switch the Wireless Transmitter is set to (see Notes).
- If your Pet Mat is not responsive, but the blue light on the Wireless Transmitter is flashing and the sensor is set to work in the unit's current mode, try changing the batteries for the Wireless Transmitter. If this doesn't resolve the issue, attempt to relearn the Pet Mat to the unit by following the Installation instructions.