



PO Box 130 • 32556 East Main St. • Elk Point, SD 57025

PH: 605.356.2772 • FAX: 605.356.3662

Instructions for connecting extra 12 volt DC whistle, bell, siren, strobe, etc.

The red and black leads from the whistle, etc. are for a 12 Volt DC input. Connect the red lead to the (+) terminal and the black lead to the (-) terminal of the 12 Volt DC output. The whistle, etc. will activate for about 4 seconds when a signal is received. If you would like to run the extra whistle, etc. to another location, please use 2 strand wire run to the desired location.