 


Mail Chimetm

 
How It Works

When the mailbox door is opened, the Receiver in the house will buzz four times and display a red LED light. After you retrieve your mail, press the reset button to reset.

Package Contents

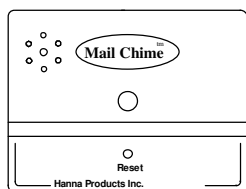


Receiver

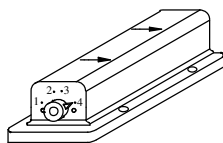

Transmitter



 
12 volt, A23 battery

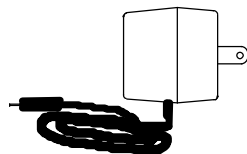


AC adaptor

Battery can be purchased at most drug stores and battery stores.

 
1. Remove top case by removing four screws.

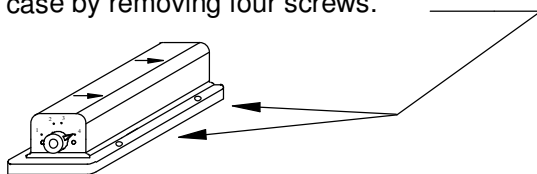

 
2. Place the battery into the battery holder. Be sure the positive end is towards the knob at the end of the case.

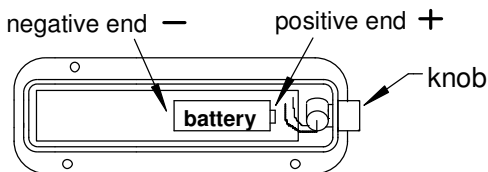

 3. Reassemble the case using the 4 screws.
4. Refer to page 2 and set the dial setting for your type of mailbox.
5. Peel the protective cover off the double faced tape on the bottom of the Transmitter and attach the Transmitter to your mailbox door. Note the direction of the arrows.




 6. Plug the AC adaptor into the back of the Receiver and the wall outlet.
7. Straighten the antenna vertically.

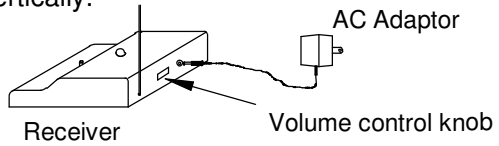


8. Adjust the volume control knob on the back of the receiver. You may turn the sound off and use only the LED light to tell you when your mail arrives if you wish.
9. When you press the reset button down to turn off the red light, it is best if you do not hold it down for more than 1-2 seconds.

 
Curb Side



 Set dial on # 4 - Mount with arrows on Transmitter pointing up towards the top of the mailbox door.

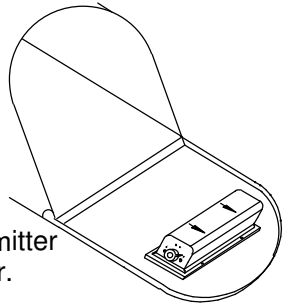


Wall Mounted

 


Set dial on # 3 - for mailboxes with large tapered lids.
Mount with arrows on Transmitter pointing up.

 
Set dial on # 2 - for mailboxes with short tapered lids and flat tops.
Mount with arrows on Transmitter pointing up.

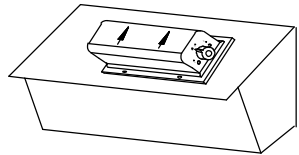

Slot Type

 

 Set dial on # 4 - Mount with arrows on Transmitter pointing up towards hinge.

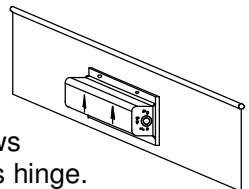

Trouble shooting

1. Check if you mounted the Transmitter correctly on your mailbox.
2. For a curb side mailbox, check if the arrows point towards you when you open the mailbox door.
3. Check if the battery is installed correctly.
4. Check if your mailbox is level.
5. Move the receiver to a different location.
6. Units are made as sets, so if you should ever purchase a replacement unit, do not mix the new with the old.

Thank you for buying the Mail Chime.

**If you have any questions or problems, please call
Hanna Products on 309-788-1982.**

FCC ID: RNCMAIL-1200

This device complies with Part 15 of the FCC rules. Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. CAUTION: Changes or modifications not expressly approved by the party responsible could void the user's authority to operate this equipment.

Patent No. 7,506,796
Designed in USA
Made in Taiwan

Hanna Products Inc.
2602 37th Street, Rock Island, IL 61201
Phone (309) 788-1982 Email: hannaproducts@mchsi.com