

PASSIVE INFRARED DETECTOR AP2-20N

FEATURES

- Fresnel Lens design
- Novel and elegant appearance
- Double Conductive Shielding Technology(Patented)
- High-Density Detection Zone
- Even Sensitivity

EASY INSTALLATION

- 86-box Bracket Mounting
- Universal Bracket Mounting
- Combine Wall and Ceiling Mounting
- Easy Wiring Knockouts


FUNCTIONS

- LED On/Off Switch
- Tamper Switch
- Selectable Sensitivity(H/ L)

1. INSTALLATION HINTS




Avoid direct sunlight.

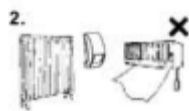


Avoid looking directly at air conditioning or heating vents.




Avoid vapor or high humidity that can cause condensation.

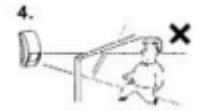


Avoid curtain, screen, etc. blocking detection area.

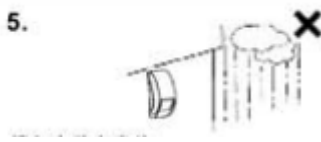

Do not install outdoors.

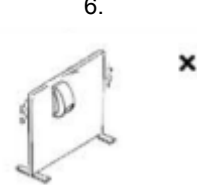


Do not mount in unstable location where vibration or shock may affect the detector.

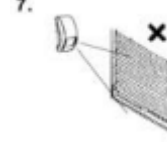

Do not aim detection area towards equipment which continually moves in the detection area (i.e. curtain, blinds).

2. DESCRIPTION AND OPERATION

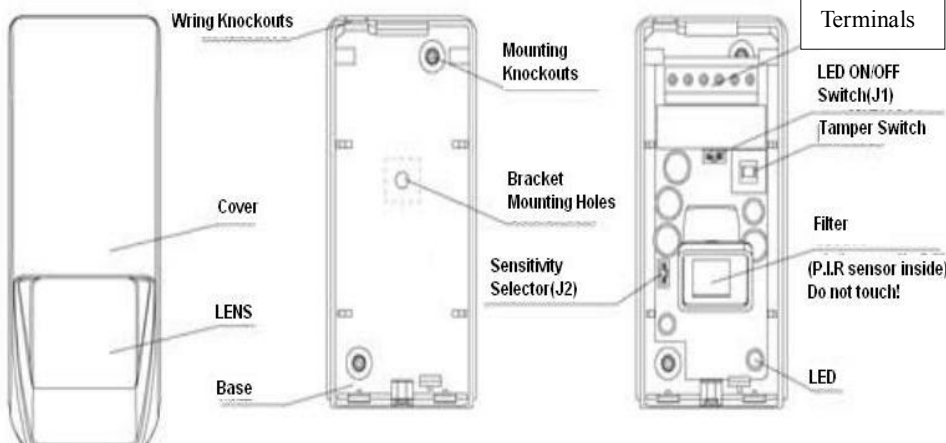

LED ON/OFF Switch(J1):

To control switch ON or OFF by adjusting the pin switch.

- ON: LED is on.
- OFF: LED is off.



Sensitivity Selector(J2)

Select two kinds of sensitivity by adjusting the pin switch.

- L: Low sensitivity (installation height is less than 3.0m).
- H: High sensitivity (installation height is higher than 3.0m, including 3.0m).




Bracket Mounting

* Bracket mounting is necessary when needs to adjust the angle of zone during installation.

* When install bracket, it should to be mounted in the bracket mounting hole which is in the base.

3. DETECTION AREA PATTERNS

Ceiling

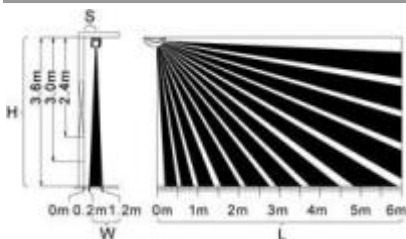

Wall

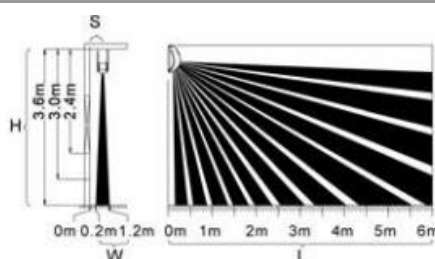



Table of installation parameters:

Installation height(H)	2.4m	3.0m	3.6m
Zone width(W)	0.6m	0.8m	1.0m
Zone length (L)	6.0m	6.0m	6.0m
Distance from the wall-recommend (S)	0.5m	0.6m	0.7m


4. INSTALLATION



1. Open the cover
and remove it.

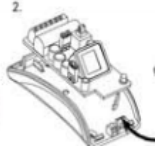


2. Loosen the
hook at forepart of
base, and then
remove the P.C.B.

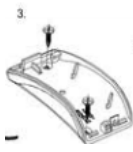

3. Put the point of
screw-driver in
wiring knockouts
of base, and hit
the top of driver to
crack into
knockouts. Mount
base with
supplied two
screws.



4. Wire according
to Section 5, And
then fix P.C.B. unit
with hook.

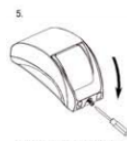

5 Fit cover (first
buckle up top side,
then press down
bottom side) and
lock screws as
required.




Note 1:
Note 1. When
using bracket,
it should be
mounted in the
square hole
that showed in
the figure.



Note 2. To remove cover in installation
state, first remove the screw which fits
cover, and then pry off according to
direction shown in the figure by using
screwdriver which can be inserted into
either hole on both sides.

5 WIRING

Power input: 9.5V~16V DC
Alarm output: N.C.
Tamper: N.C.

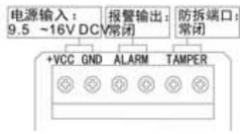

Power wires should not exceed the following lengths.

WIRE GAUGE	12V DC	14V DC
AWG22(0.33mm ²)	480m	1030m
AWG20(0.52mm ²)	750m	1630m
AWG18(0.83mm ²)	1200m	2600m

•The wiring length between power supply and detector should not be longer than the length listed in the left table.

•When using two or more units on one wire, the maximum length is obtained by dividing the maximum wire length listed by the number of detectors used.

•Only use the wire which diameter is under Φ 4.5mm(including Φ 4.5mm) during mounting.

6 TROUBLE SHOOTING AND MAINTENANCE

PROBLEM	PROBABLE CAUSE	REMEDY
LED does not light.	Incorrect power supply voltage.(disconnection, low voltage)	Correct the voltage supply to 9.5V~16 V DC.
	Incorrect detection area.	See Section 3.
	LED switch is OFF.	Turn on the switch.(See Section 2)
LED lights even though no person within area.	Moving object within area (curtain, wall hanging, plants, etc.)	Remove object from detection area, or change location of detector.
	Rapid temperature changes within area (heater, air-conditioner, etc.)	Remove the heat sources from detection area, or change location of detector.
LED lights but signal is not sent.	Relay contact is stuck or damaged due to overloading.	Check load of output.
		The unit needs repair or replacement.
	Faulty wiring.	Wire correctly.

7. SPECIFICATIONS

MODEL	AP2-20N
Detection Method	Passive Infrared
Coverage	6.0x1.0m(Mounting height at 3.6m)
Mounting	Ceiling and wall
Mounting Height	2.4~3.6m
Zone Width	1.0m max(Mounting height at 3.6m)
Sensitivity	2°C at 0.6m/s
Detectable Speed	0.3~3.0m/s
LED Indicator	Switch-able ON/OFF
Sensitivity Adjustment	H/L
Alarm Output	Approx. 2.5 sec, N.C., 28V DC, 200mA max
Tamper Switch	N.C., Opens when cover is removed N.C. 28V DC, 100mA(max)
Warm up Period	Approx. 60 sec
Power Input	9.5~16V DC
Current Draw	12mA(max)
Weight	Approx. 50g
Operating Temperature	-20°C~+50°C
Environmental Humidity	95% max.
RF Interference	No alarm 10V/m at 80MHz~1GHz
Using Occasions	Indoor

*Specifications and design are subject to change without prior notice.



Note: This unit is designed to detect movement of an intruder and activate an alarm control panel. Being only a part of the complete alarm system, we cannot accept responsibility for any damages or other consequences resulting from an intrusion.


OPTEX CO., LTD.(Japan)
<http://www.optex.co.jp/el>

OPTEX INC. (U.S.)
<http://www.optexamerica.com>

OPTEX DO BRASIL LTDA. (Brazil)
<http://www.optex.net/br/es/sec>

OPTEX (EUROPE) LTD. / EMEA HQ (U.K.)
<http://www.optex-europe.com>

8.DIMENSIONS

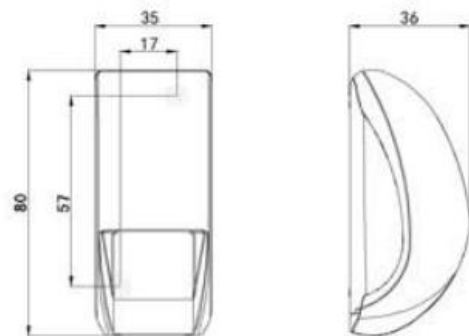

mm

OPTEX TECHNOLOGIES B.V. (The Netherlands)
<http://www.optex.eu>

OPTEX SECURITY SAS (France)
<http://www.optex-security.com>

OPTEX SECURITY Sp.z o.o. (Poland)
<http://www.optex.com.pl>

OPTEX PINNACLE INDIA, PVT., LTD. (India)
<http://www.optex.net/in/en/sec>

OPTEX KOREA CO.,LTD. (Korea)
<http://www.optexkorea.com>

OPTEX (DONGGUAN) CO.,LTD. SHANGHAI OFFICE (China)
<http://www.optexchina.com>

OPTEX (Thailand) CO., LTD. (Thailand)
<http://www.optex.net/th/th>