

INSTALLATION INSTRUCTIONS

Z7200 SOLENOID CONTROLLED CYLINDRICAL LOCKSET

FOR USE ON DOORS 1-3/8" ~ 2" (35mm ~ 51mm) THICK

TOOLS REQUIRED FOR NEW INSTALLATION:

1 philips head screwdriver 1 2-1/8" (54MM) hole saw


1 1" (25.4mm) drill bit 1 5/16" (8mm) drill bit

1 chisel 1 file

OPTIONAL:


DOOR CORE DRILLING GUIDE KIT

SDC P/N: 7000-DGK

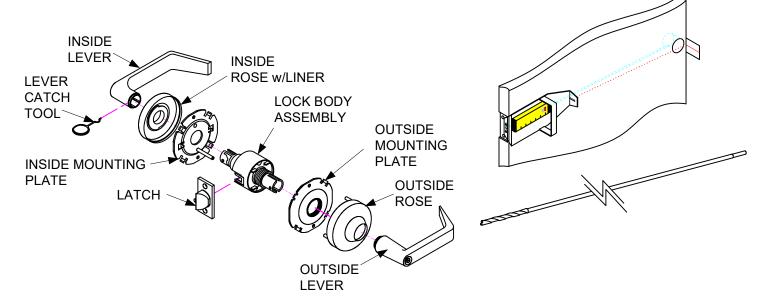


1. MARK DOOR

- a. Mark centerline on door face and door edge (usually 38" from finished floor)
- b. Standard supplied backset is 2-3/4" optional backset is 2-3/8". Mark center hole on door face depending on backset option.

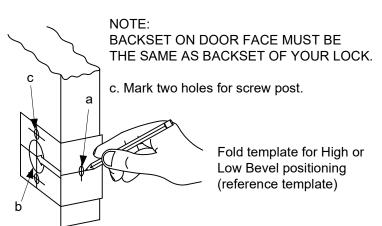

^{*} Refer to page 6 for dimensions.

2. DRILL HOLES

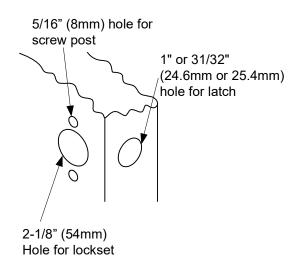





3. INSTALL LATCH


- a. Insert latch in hole and keep it parallel to door face. Mark outline and remove latch
- b. For wood doors chisel 1/8" (3mm) deep or until faceplate is flush with door edge.
- c. Insert latch and tighten screws.

NOTE:

LATCH BOLT BEVEL MUST FACE TOWARDS CLOSING DIRECTION.

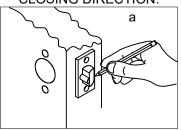


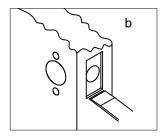


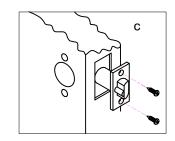


4. INSTALL STRIKE


- a. Close door to mark horizontal line of strike.
- b. For wood frames measure one half of door thickness from door stop to mark vertical center line of strike. Drill 1" (25.4mm) hole, 1/2" (12.7mm) deep at intersection of horizontal and vertical center lines.
- c. Cut out jamb 3/32" (2.4mm) deep or until strike is flush with jamb. Tighten screws securely.

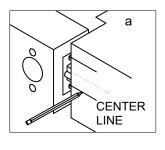

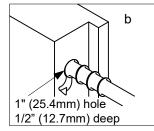

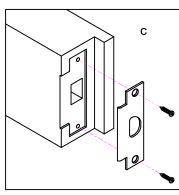



5. REMOVE INSIDE TRIM

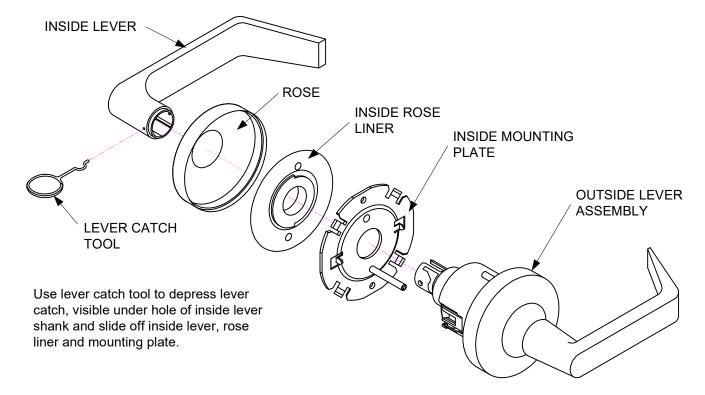





   6. ADJUST OUTSIDE MOUNTING PLATE PER DOOR THICKNESS








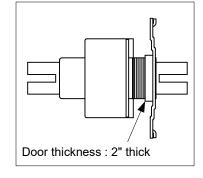


7. INSTALL OUTSIDE LEVER ASSEMBLY

Install outside lever assembly on the door. Make sure tail of latch is engaging with retractor correctly as illustrated. Refer to wire diagram on last page for wiring.

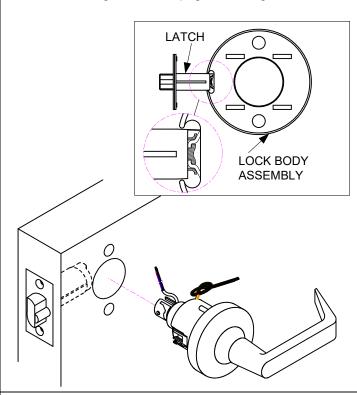


8. INSTALL INSIDE MOUNTING PLATE AND ROSE

a. Install inside mounting plate to lock body.

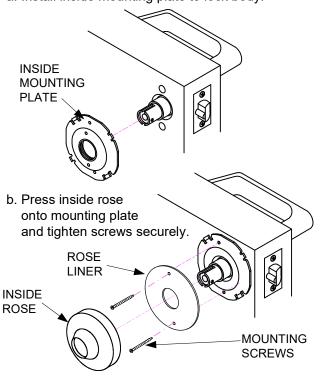

9. INSTALL LEVER

a. Push inside lever on completely until catch engages in lever. Confirm lever is secured.

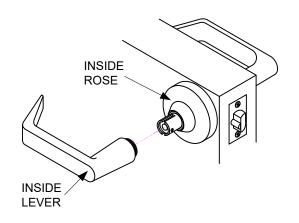




[t] 800.413.8783 ■ 805.494.0622 ■ E-mail: service@sdcsecurity.com ■ 801 Avenida Acaso, Camarillo, CA 93012 ■ PO Box 3670, Camarillo, CA 93011


WIRE DIAGRAM 7252 Models (Fail-Secure)

STANDARD WIRING:

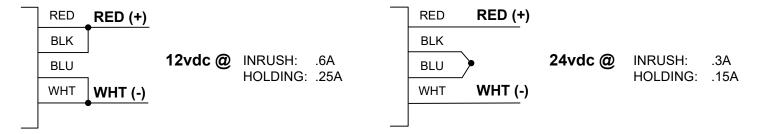

OPTIONAL PR-7200 WIRING:

Using the PR-7200 limits the power consumption, reduces operating temperature, and suppresses inductive kickback. (The PR-7200 is only supplied with the Fail-Safe models.)

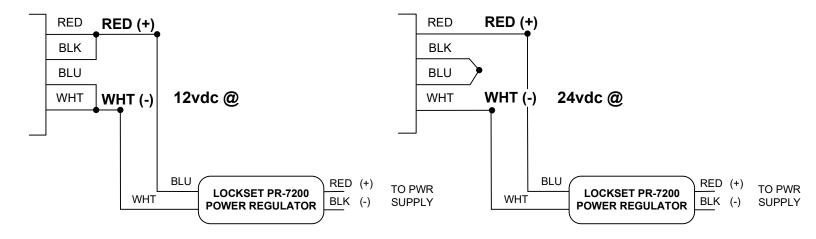

OPTIONAL MONITORING WIRING:

LATCH STATUS MECHANICAL SWITCH SPDT 3A @ 30VDC

REQUEST-TO-EXIT MAGNETIC SENSOR 200mA @ 30VAC (RESISTIVE)

LATCH STATUS:

COM = WHT/RED N/C = ORG/RED N/O = YEL/RED *Both options cant be used simultaneously.

COM = GREY N/C = YELLOW N/O = ORANGE


REX:



[t] 800.413.8783 **■** 805.494.0622 **■** E-mail: service@sdcsecurity.com **■** 801 Avenida Acaso, Camarillo, CA 93012 **■** PO Box 3670, Camarillo, CA 93011

WIRE DIAGRAM 7250 Models (Fail-Safe)

The PR-7200 power regulator is included with all Fail-Safe models. Using the PR-7200 limits the power consumption, reduces operating temperature, and suppresses inductive kickback. The use of the PR-7200 is highly recommended for locks which will be energized for extended periods of time.

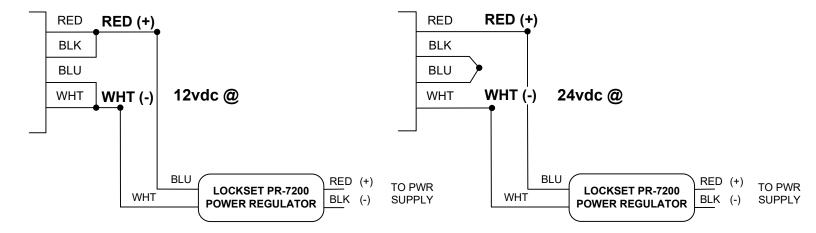

OPTIONAL MONITORING WIRING:

LATCH STATUS MECHANICAL SWITCH SPDT 3A @ 30VDC

LATCH STATUS:

COM = WHT/RED N/C = ORG/RED N/O = YEL/RED *Both options cant be used simultaneously.

REQUEST-TO-EXIT MAGNETIC SENSOR 200mA @ 30VAC (RESISTIVE)

REX:

COM = GREY N/C = YELLOW N/O = ORANGE [t] 800.413.8783
805.494.0622
E-mail: service@sdcsecurity.com 801 Avenida Acaso, Camarillo, CA 93012
PO Box 3670, Camarillo, CA 93011

DIMENSIONAL LAYOUT

DO NOT USE AS A PHYSICAL TEMPLATE. THIS LAYOUT IS INTENDED AS A DIMENSIONAL REFERENCE ONLY. USE THE TEMPLATE PACKAGED WITH THE LOCK

