

IP 5MP 2.8mm Bullet Camera with WDR

EV-N1506-2W4WQ

Installation Manual





FCC (E 🐵

Features

- 1/2.7" 5MP SmartSens CMOS sensor
- 30FPS@5MP (2880x1620)
- 2.8mm Lens
- Tri-stream encoding: H.265, H.264, and MJPEG
- True Wide Dynamic Range (WDR)
- Digital Noise Reduction (3DNR)
- True Day & Night function with ICR module
- · ICR Sensitivity adjustment
- Corridor mode
- IP66 Weatherproof
- IR Range 98' (30m)
- Smart IRs adjust IR strength to conditions
- MicroSD slot (512GB max)
- PoE (IEEE802.3af), 12VDC
- ONVIF® Profile G, S, and T conformant
- Operating Temperature: -40°~131°F (-40°~55°C)

AI Functions

- Human and Vehicle Detection
- Perimeter Intrusion Detection
- Line Crossing Detection
- · Stationary Object Detection
- Cross Counting
- Heat Map
- Crowd Density Detection
- Queue Length Detection
- Face Detection



For the full Web Administration manual, download from the camera's product page on www.seco-larm.com.

SECO-LARM®

Parts List


- 1x Camera 1x Manual
- 2xHex Key1xMounting Template

3xMounting Screws1xWeatherproof Connector


Specifications

Туре		Bullet camera
Sensor		1/2.7" 5MP SmartSens CMOS
Video encoding		H.265/H.264/MJPEG
Megapixels		5MP
Resolution		2880x1620
Backlight		Disable (Default), Back Light, HLC, WDR
DNR	2DNR	N/A
	3DNR	Yes
AI functions		Human and Vehicle Detection, Perimeter Intrusion Detection, Line Crossing Detection, Stationary Object Detection, Cross Counting, Heat Map, Crowd Density Detection, Queue Length Detection, Face Detection
# of IR LEDs		2pcs (850nm)
Lens		2.8mm
Viewing angle		133°
Minimum illumination		Color: 0.1 lux at F1.2 (AGC on) 0 lux with IR on
F Stop		1.6
Gamma correction		Auto
S/N ratio		39dB
Gain control		Auto
White balance		Auto
Operating voltage		12VDC, PoE (IEEE802.3af Class 0)
Current draw (IR Off)		80mA max.
IP Rating		IP66
Operating temperature		-40°~131° F (-40°~55° C)
Dimensions		ø2 ¹³ / ₁₆ " x5 ¹⁵ / ₁₆ " (ø71x151 mm)
Weight		9.7-oz (275g)
On-board storage		Built-in memory card slot, Supports MicroSD/SDHC/SDXC up to 512GB

Overview

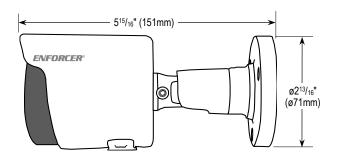

ENFORCER IP 5MP 2.8mm Bullet Camera with WDR

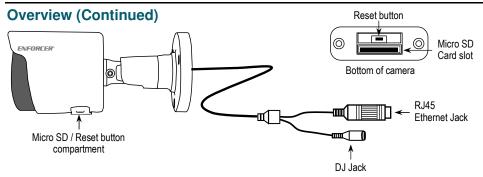

IMPORTANT NOTES

- Do not cut DC jack or RJ45 jack as warranty will be voided.
- Do not open camera case, no serviceable parts.

Before Starting

- 1. Please read this manual carefully and keep it for future reference.
- 2. Use the camera within given temperature and electrical limits.
- Do not mount the camera in areas exposed to radiation, strong magnetic fields, or strong electrical signals.

Installation

- Run a 12VDC power supply wire and cable with an RJ45 jack through the wall at the location where the camera is to be mounted. The 12VDC power supply wire is not required if using PoE.
- Install and Execute "Device Config Tool" on a computer connected to the same network as the camera.
- Press the "Search" button. This will search for IP cameras connected to the same router on the network. It may take several seconds to complete. Default IP address is 192.168.1.168.
- Once the search is complete, click on the camera IP or type the IP address manually using Internet Explorer.
- IP Address: The camera may use Dynamic or Static IP addressing. An example of a typical static IP setting is as follows:
 - IP Address: 192.168.0.10 (you can change the last column)

- 4. Do not point the camera at the sun. Heat could damage the camera, even when not in use.
- 5. Do not open or disassemble the camera. There are no field-serviceable parts inside.
- 6. Do not drop the camera or subject it to strong vibrations.

Netmask: 255.255.255.0 Gateway: 192.168.0.1 DNS1/2: You can copy the PC's network properties. This is for an internet environment.

- Input "admin" for user ID and password. If this is the user's first time logging into the camera, the user will be prompted for a new password.
 - NOTE: If the password is unknown, hold the RESET button located on the camera for about 10 seconds and reload "Device Config Tool".
- In order to access the camera web interface, the user will be prompted to download and install the Active-X web plugin.
- Once installed, the user will be able to view live camera video and modify necessary configurations.

 
NOTE: For the full Web Admin manual, download from the camera's product page on www.seco-larm.com.

Camera Angle and Positioning

To adjust the camera angle and positioning, loosen the camera angle adjustment screw and mounting arm adjustment screw. Rotate the camera and position the mounting arm in the desired position and retighten the screws.


Camera angle

Camera angle adjustment screw



Camera arm position

 Mounting arm adjustment screw



Troubleshooting

	 Check that the camera is powered up.
	 Check that the power supply's polarity is correct.
The screen is blank	 Check that the monitor is powered up.
	 Check that the video cable connecting the camera to the monitor is connected properly.
The screen image is dim	Clean the lens using a soft, clean cloth.
	Check that the light source is adequate.
The screen image has poor	 Adjust the monitor's contrast knob.
contrast	Change the position of the camera.
The screen image flickers	Change the position of the camera.
The screen image is distorted	Change the position of the camera.
The camera case is hot	Check that the correct power supply is in use.

Objectively the station of the second state of the second state of the state of the second state of the se

FCC COMPLIANCE STATEMENT

THIS DEVICE COMPULES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

IMPORTANT: Users and installers of this product are responsible for ensuring this product complies with all national, state, and local laws and statutes related to monitoring and recording audio and video signals. SECO-LARM will not be held responsible for the use of this product in violation of any current laws or statutes.

IMPORTANT: Users and installers of this product are responsible for ensuring that the installation and configuration of this product complies with all national, state, and local laws and codes. SECO-LARM will not be held responsible for the use of this product in violation of any current laws or codes.

California Proposition 65 Warning: These products may contain chemicals which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to <u>www.P65Warnings.ca.gov</u>.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for three (3) years from the date of sale to the original customer. SECO-LARM sobligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM and the purchaser's exclusive remedy, shall be limited to the replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damage of any kind to the purchaser or anyone else.

NOTICE: The SECO-LARM policy is one of continual development and improvement. For that reason, SECO LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints. All trademarks are the property of SECO-LARM U.S.A., Inc. or their respective owners. Copyright © 2023 SECO-LARM U.S.A., Inc. All rights reserved.

SECO-LARM®U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606 Phone: (949) 261-2999 | (800) 662-0800 Website: www.seco-larm.com



Email: sales@seco-larm.com MI_EV-N1506-2W4WQ_221117.docx