



INSTALLATION INSTRUCTIONS

WIRELESS 3 WAY ON/OFF KIT

Model: SK8



Congratulations on your purchase of the SkylinkHome™ Wireless 3 Way On/Off Kit, model SK8. Simply replace your existing wall switch with the Skylink Wall Switch receiver and mount the Wireless Wall Switch Transmitter anywhere you would like to control your lighting.

Warranty

ONE YEAR WARRANTY

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 1-800-304-1187 for repair or replacement parts. Guarantee does not include normal wear and tear or batteries.



If you have any questions, problems or missing parts, please call Skylink Customer Support: 9:00am - 5:00pm EST, Monday-Friday.

1-800-304-1187

Or e-mail us at support@skylinkhome.com

www.skylinkhome.com

CUSTOMER SERVICE
17 Sheard Avenue,
Brampton, Ontario,
Canada L6Y1J3

P/N : 101Y157 Rev:0
©2014 SKYLINK GROUP.

Safety Information

- Turn off power to the circuit breaker before installing.
- If you are uncertain or uncomfortable performing this installation, please consult a qualified electrician. This manual should also be kept for future reference.
- For indoor use only.
- DO NOT use this product to control loads over the specified maximum rating.


The device is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.

Technical Specifications

Input Voltage	120V AC, 60Hz
Standby Current	0.2mA
Minimum Load	10W
Maximum Ballast Load	500W
Maximum Tungsten Load	600W
Maximum Resistive Load	1000W
Operating Frequency	318MHz
Operational Temperature	-4°F - 140°F (-20°C - 60°C)
Humidity	5% - 95%
Range	Up to 500 feet in open area

Package Contents

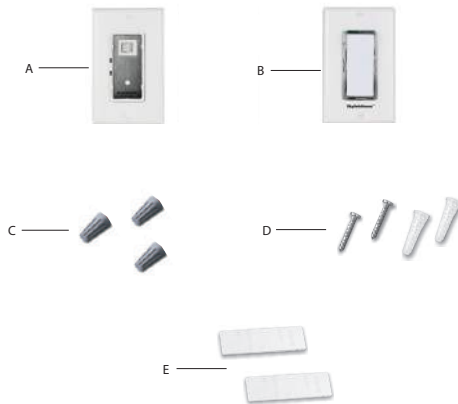


Part	Description	Quantity
A	Wall Switch Receiver	1
B	Wireless Wall Switch Transmitter	1
C	Wire Nuts	3
D	Screws and anchors	2
E	Double-sided Foam Tape	2

Section 1 - Setting up the Wall Switch Receiver

- WARNING:** Turn off power to the circuit that you plan on installing the Wall Switch to, at the circuit breaker. Failure to turn off power at the circuit breaker can result in electrical shock, causing severe or fatal injury.
- NOTE:** The Wall Switch is designed to operate a maximum load of 1000W at 120VAC.
- NOTE:** If you already have an existing 3 Way Switch, disable one switch and replace the other switch with the Wall Switch Receiver.

- Loosen the screws on the wall plate cover of the Wall Switch receiver and remove it before installing.
- Install the Wall Switch with the 3 wires, Live, Load and Ground. Use the provided wire nuts (C) to connect these wires respectively to the existing wires from the wall. Neutral wire is not required and cannot be connected to the Wall Switch Receiver. Refer to Section 10 for neutral wiring.
- After all the wires are connected, ensure that all of the wire connectors are attached securely and there should be no exposed copper wiring. Secure the Wall Switch with screws.

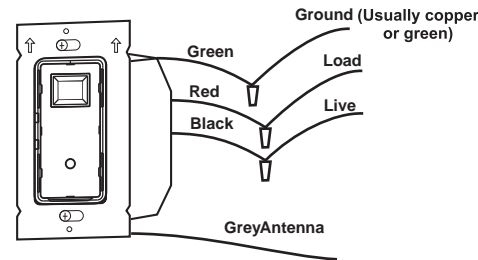

NOTE: Do not cut the antenna.


Section 2 - Setting up (continued)

INSTALLING WITH SCREWS

NOTE: The Wall Mount transmitter comes with a lithium battery already installed. Remove the battery isolator tag from the Wall Mount Transmitter before installing.


Installing to an Existing Wall Switch

- Loosen the screws on the wall plate of the Wireless Wall Switch transmitter and tighten the two included screws (D) on the back plate to the existing wall box.
- Tighten the two screws on the wall plate to the back plate to secure it.
- The Wireless Wall Switch transmitter is now ready to be controlled.

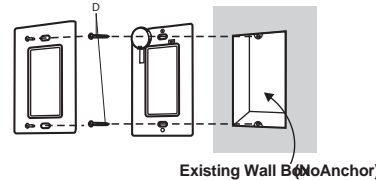


Installing on New Wall Surface

- Drill two small pilot holes based on the two mounting screw positions and insert the anchors (D) before tightening the back plate with screws (D).
- Tighten the two screws on the wall plate to the back plate to secure it.
- The Wireless Wall Switch transmitter is now ready to be controlled.

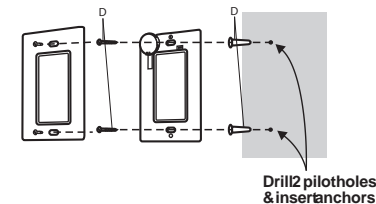

- Turn the circuit breaker back on.
- The two blue LEDs will be on. If the blue LEDs remain off, please check and ensure the light bulb is installed and in good position and that the wires are connected correctly.
- After the Wall Switch is installed, press the Switch Button to turn the lights on and off.

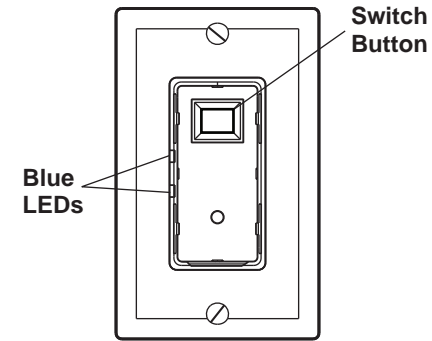


Blue LEDs

Switch Button

Section 3 - Operation

Wall Switch Receiver

- To turn the light on press the Switch Button once and to turn it off press it once more.

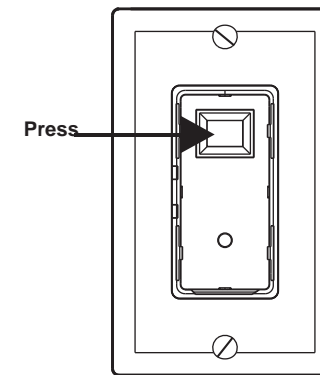


Section 2 - Setting up the Wireless Wall Switch Transmitter

INSTALLING WITH DOUBLE SIDED TAPE


NOTE: The Wireless Wall Switch Transmitter comes with a lithium battery already installed. Remove the battery isolator tag from the Wireless Wall Switch transmitter before installing.

- First clean the wall surface where you plan to install the Wireless Wall Switch transmitter.
- Place the two foam tapes (E) on the back of the Wireless Wall Switch transmitter plate.
- Peel off the foam tape cover and stick it to the wall surface.

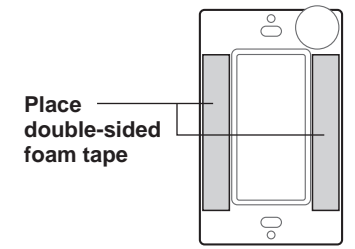

Wireless Wall Switch Transmitter

- To turn the light on and off, push the Wireless Wall Switch pad from one position to the other.

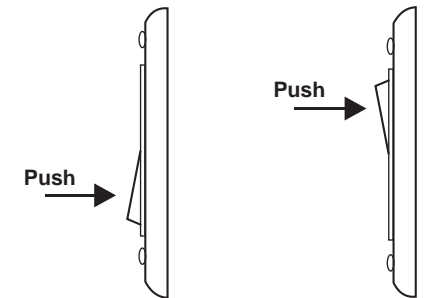


Section 4 - Programming


NOTE: Before programming, remove the wall plate on the Wireless Wall Switch transmitter by loosening the screws.

NOTE: Use a sharp non-conductive object, like a pen or pencil, to press the learn button.

1. Press the Switch Button on the Wall Switch receiver to turn the lights on. The two blue LEDs should go off.
2. Press and hold the learn button for about three seconds until the upper blue LED flashes quickly and then release the learn button.


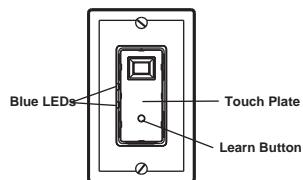


3. Press the learn button on your Wireless Wall Switch transmitter. The red LED will be on for 15 seconds.
4. Press the pad (switch) on the Wall Switch Transmitter, the red LED will flash and then go off. The upper blue LED on the Wall Switch Receiver will also turn off.
5. Both wall switches are now programmed.

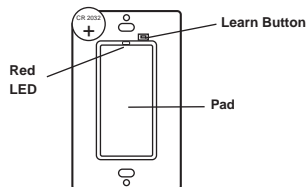

Section 9 - Replacing the Battery

1. Remove the wall plate from the Wireless Wall Switch transmitter by loosening the two screws.
2. Remove the existing battery by sliding it out.
3. Insert the new battery, positive side up, by sliding it in and pushing down on the battery to lock it in place.
4. When the battery is installed, the red LED on the transmitter will be on for one second.

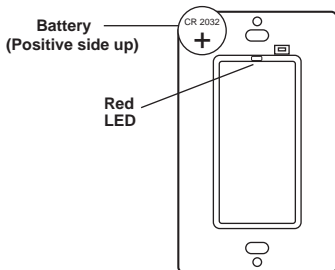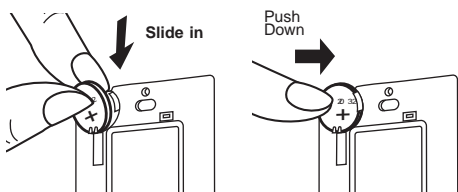


Section 5 - Erasing

NOTE: All previously programmed devices will be erased. You must re-program the devices you want to keep.

NOTE: Use a sharp non-conductive object, like a pen or pencil, to press the learn button.

1. Press the Switch Button on the Wall Switch receiver to turn the lights on. The two blue LEDs should go off.
2. Transmit an "Erase" code from the transmitter until step 5. Refer to the user's instructions of the transmitter on how to transmit an "Erase" code.
3. Press and hold the learn button for about 3 seconds, until the upper blue LED flashes.

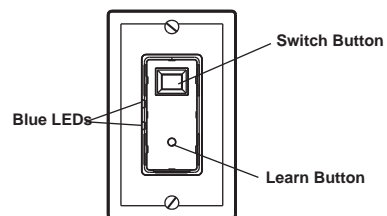


4. Release the learn button.
5. All devices have now been successfully erased.


Section 10 - The Wiring Diagram

NOTE: Wire colours may vary in the junction box.

1. Wiring Diagram without Neutral Wire

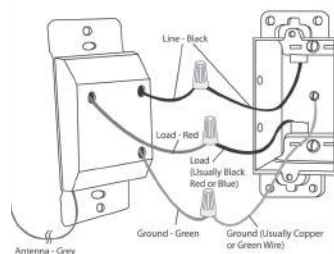

2. Wiring Diagram with Neutral Wire

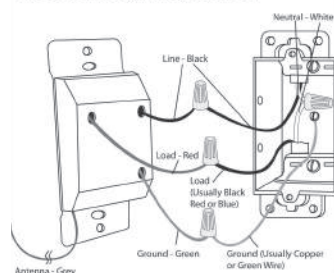

Section 6 - Enable/Disable On/Off

NOTE: On/Off Mode turns the lights on/off.

1. Turn the light on with the programmed transmitter or Switch Button.
2. Press and hold the learn button on the Wall Switch receiver for about 3 seconds until the upper blue LED flashes quickly.
3. Release the learn button.
4. The Wall Switch receiver is now in the On/Off Mode.


Section 7 - Countdown Timer Mode

NOTE: If the Countdown Timer Mode is activated, the light connected to the Wall Switch receiver will flash for a predetermined time interval and then turn off.

NOTE: You must complete the programming sequence within the 15-second interval, otherwise the Wall Switch receiver will quit from programming mode and you will need to start again from step 1.

NOTE: Use a sharp non-conductive object, like a pen or pencil, to press the learn button.

1. To program a transmitter to operate in Countdown Timer Mode, hold the learn button on your Wall Switch receiver for about 10 seconds, until the upper blue LED is on steadily, then release the learn button.
2. Press the learn button on your transmitter. The red LED will be on for 15 seconds.
3. Once the transmitter is programmed, both blue LEDs will flash quickly and stop flashing.
4. The transmitter has been successfully programmed.

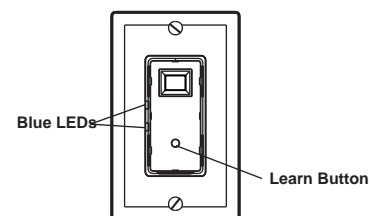

NOTE: Once you have successfully completed the programming, go to section 8 to setup the timer duration for the transmitter.

Optional Snap-On Decorative Cover

Snap a cover into your Skylink Wall Switch!

Place the Snap-On Cover on the opening of the Wall Switch receiver for a more stylish look. Press the button on the Snap-On Cover, TM-002, to turn lights on/off. Or carry the Snap-On Remote, TM-318, with you for local control and when you are done snap it back onto the Wall Switch.



Section 8 - Setting a Timer Duration

NOTE: This section is for transmitters that are programmed to Countdown Timer Mode. The timer duration can be set for the following times: 1 minute, 5 minutes, 15 minutes, 30 minutes or 60 minutes.

NOTE: Once the number of flashes reaches 5, it will stay at this setting. If you would like to go back to other settings, such as 1 minute, release the button and repeat from step 1 to start over.

NOTE: Use a sharp non-conductive object, like a pen or pencil, to press the learn button.

1. The connected light must be turned off and the two blue LEDs should be on.
2. Press and hold the learn button for three seconds until the lower blue LED flashes once. The number of flashes indicates the timer duration.

Number of Flashes	Timer Duration
1	1 min.
2	5 min.
3	15 min.
4	30 min.
5	60 min.

3. Continue to hold the learn button until it reaches the desired setting. The status will change every 6 seconds; so holding the learn button for another 6 seconds the number of flashes will change from 1 to 2, 2 to 3 etc.

Once a transmitter is programmed for the timer mode, activating this programmed transmitter will turn the lights on for the specified timer duration. To stop timer countdown, press a programmed button for regular mode.

NOTE: During a timer countdown if the Wall Switch receiver receives another signal for timer operation, the timer will start again and override the previous timer. This will extend the on period by another timer interval.

Accessories

Add up to eight Skylink Wireless Transmitters!



Wireless Wall Switch
Model: TB-318



Motion Sensor
Model: ID-318



Snap-On Remote
Model: TM-318



Keychain Remote
Model: LK-318



LCD Deluxe Remote
Model: TD-318



Wireless Remote Control TC-Series
TC-Series Remotes are available in 1 to 14 buttons.

Troubleshooting

Problem	Solution
Wall Switch Receiver's LEDs and the connected load will not turn on	- Ensure the wires are side by side and held together when pushing them inside the wire nuts. - Ensure the corresponding wires are connected correctly. Refer to Section 10. - Check that the circuit breaker is turned on.
My switch has more than 3 wires in the wall box.	- If there are white wires (neutral) in the wall box, connect the white wire with a wire nut. Only connect the Load and Live wires from the wall box to the Wall Switch Receiver.
The Wall Switch Receiver is getting warm to touch.	- This is normal. Ensure the connected load does not exceed the maximum rating.
The range of my Wall Switch Receiver is decreasing.	- Keep the antenna wire as straight as possible and put it directly into the dry wall or via the hole in the wall box.
It takes a long time for the light to turn off when set to Timer Mode.	- Ensure the timer duration is set to the desired setting. - Check that there were no other Timer Mode signals being received as that will extend the ON period by another interval.
Can I dim the light on my Wall Switch Receiver?	- Not with this kit. Purchase the Skylink Wall Dimmer (WR-001 or WR-318) instead of this Wall Switch Receiver.