


Steps

1. Connect 110VAC to either (1) 787-732 for the RS-2 panel or (2) 787-732 for the RS-4 panel by connecting the Black or Brown (depending on actuator model) wire to Load, White or Blue (depending on actuator model) wire to neutral, and Green wire to ground (See figure 1).




Fig. 1

2. Connect actuators to all groups. Group 1, Group 2, Group 3, and Group 4. Do this by connecting the Red or Brown (depending on actuator model) to positive terminal and the Black or Blue (depending on actuator model) to the negative terminal.

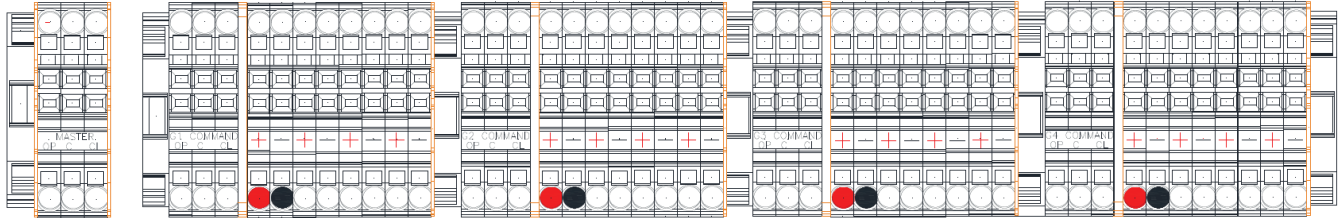

● POSITIVE
● NEGATIVE

3. Connect the control wires to the general command and all groups to test if they are functioning correctly.

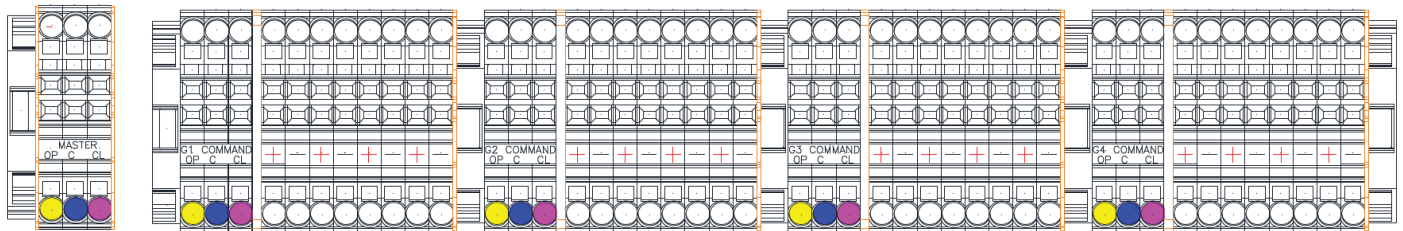

● OPEN
● COMMON
● CLOSE