


INSTALLATION INSTRUCTIONS





6.0 m (20') curtain detection area at 4.5 m (14'9") mounting height

<< Contents >>

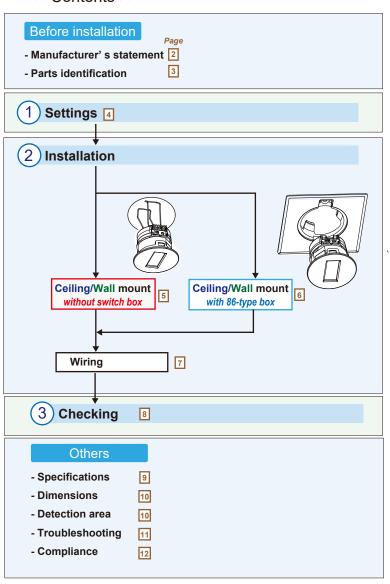

Before installation

- Manufacturer's statement


Symbol Meaning


Check mark indicates recommendation.

Warning Failure to follow the instructions provided with this indication and improper handling may cause death or serious injury.


Nix sign indicates prohibition.


Special attention is required to the section of this symbol.

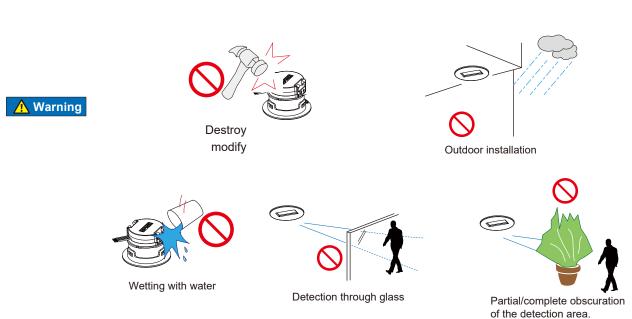

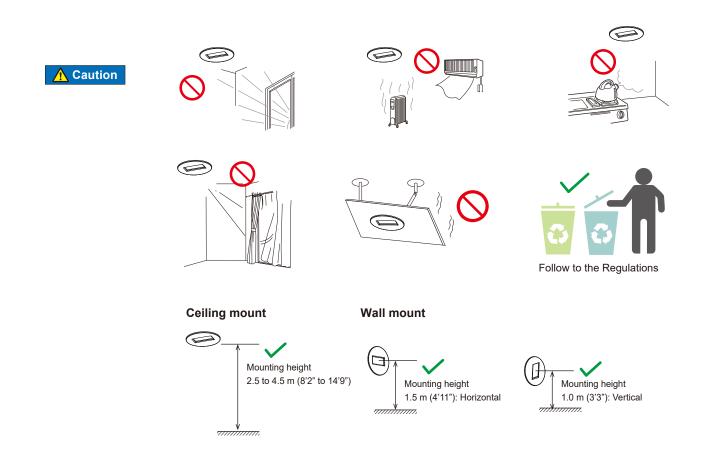


- Parts identifications

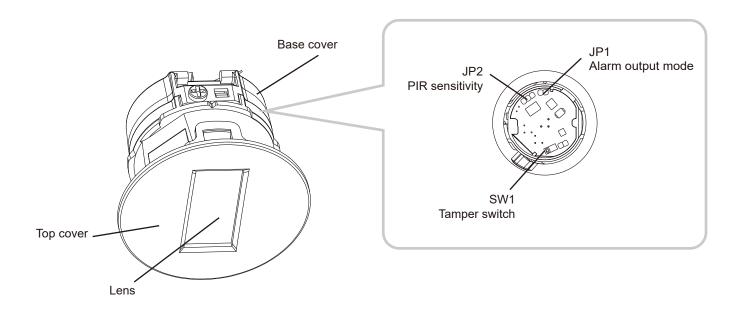

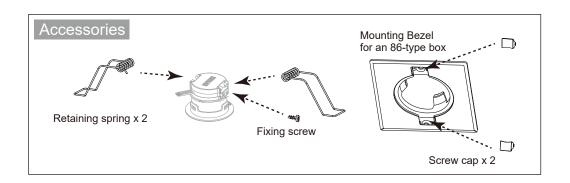

Settings


Disassemble

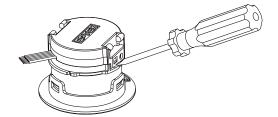


Open the base cover, and to set the detector.

2 Jumper pin settings



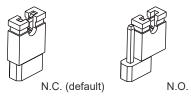



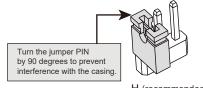






M (default) (11'6") (9'10" to 11'6")




< 3.0 m (9'10")

3 Assemble

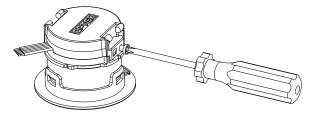


Close the base cover, and fasten the screw to fix the cover.


2-1. Ceiling/Wall mount without switch box

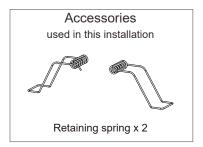


Make a ø45 mm (1.77") hole in the ceiling for mounting.

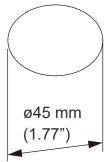


Install a retaining spring on both sides. (follow the illustrated arrow steps to complete the assembly of the retaining spring.)

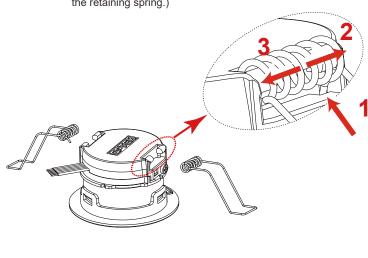


Insert the detector into the hole so that the retaining springs come first.

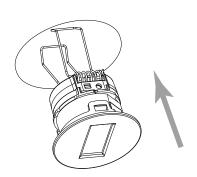


Ceiling mount

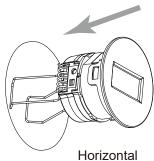

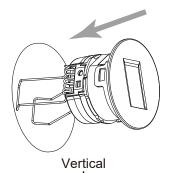


Wall mount

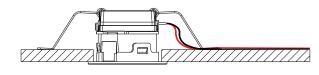


NOTE

Be sure to arrange the wires with a downward slope to prevent water igress into the detector.

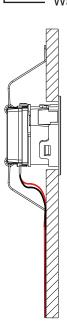


2-2. Ceiling/Wall mount with 86-type box

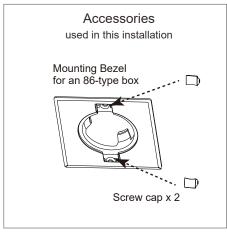


Options to procure in the market 86-type box x 1 Screw x 2


Prepare an 86-type box on the ceiling or back of the wall.

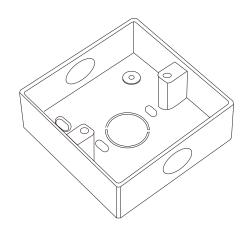


Install the detector into the 86-type box.

Ceiling mount

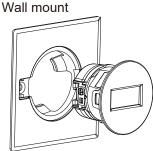


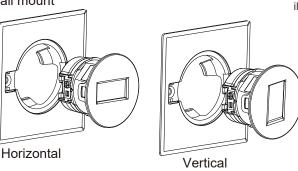

Align the bump with the triangle recess as illustrated in the figure.

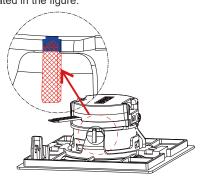



Fix the detector with two screws and cover their heads with two caps.

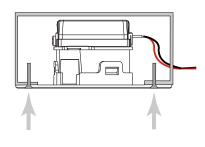

NOTE

Be sure to arrange the wires with a downward slope to prevent water igress into the detector.

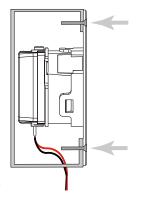

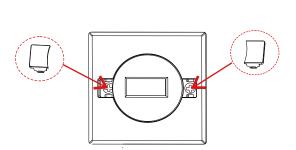

2-3. Wiring



Power cable length

The power cable should be limited to the following length.


AP-20NB(C)


WIRE GAUGE	12 V DC	14 V DC
AWG 22	520 m	1,130 m
(0.33 mm ²)	(1,710 ft.)	(3, 718 ft.)
AWG 20	820 m	1,790 m
(0.52 mm ²)	(2,690 ft.)	(5,870 ft.)
AWG 18	1,320 m	2,850 m
(0.83 mm^2)	(4.330 ft.)	(9.350 ft.)

Checking

3-1. Walk test

Power on.

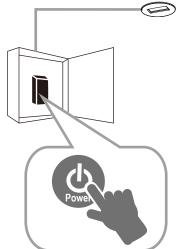

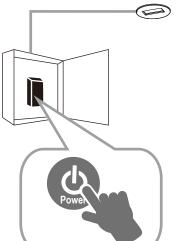


Wait for 60 seconds to complete the warm-up time.






3 Walk in the detection area to check the detecting performance.

Start operation.

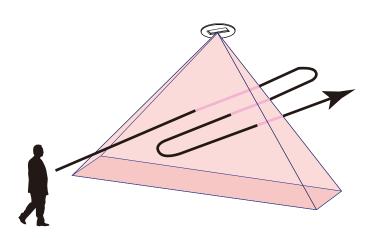

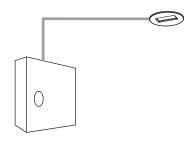


- Specifications

Model	AP-20NB(C)			
Detection method	Passive infrared			
Detection area	< Ceiling mount > 6.0 m x 1.0 m (20' x 3'3") at 4.5 m (14'9") height	< Wall mount > 6.0 m x 4.5 m (20' x 14'9") at 1.5 m (4'11") height		
Mounting height	2.5 m to 4.5 m (8'2" to 14'9")	1.5 m (4'11"): Horizontal 1.0 m (3'3"): Vertical		
Mounting type	Recessed ceiling mount/ Wall mount/ 86-type box mount			
Sensitivity	2.0°C at 0.6 m/s (3.6°F at 2'/s)			
Detection speed	0.3 to 3.0 m/s (1'/s to 9'10"/s)			
	Warm-up upon power on: blinking			
LED indicator	Stand-by: off			
	Alarm: solid on			
Alarm cycle	Approx. 2 s			
Alarm output	N.O./N.C., 28 V DC 200 mA max.			
Tamper switch	N.C. 28 V DC 100 mA max. The contact opens once the casing is detached.			
Warm-up time	Approx. 60 s			
Power supply	9.5 to 16 V DC			
Current	12 V DC Stand-by: 11mA, Max.: 13 mA			
PIR sensitivity	H/ M/ L			
Weight	50 g (1.76 oz)			
Operation temprature	-20 to +50°C (-4°F to +122°F)			
Operation humidity	< 95%			
Location	Indoors			
Dimensions	ø52 x 35.5 mm (ø2.05 in. x 1.40 in.): without switch box mount			
Difficition 13	86 x 86 x 36.5 mm (3.39 x 3.39 x 1.44 in.): with 86-type box mount			


- Specifications and designs are subject to change without prior notice.
- These units are designed to detect an intruder and activate an alarm control panel. Being only a part of a complete system, we cannot accept responsibility for any damages or other consequences resulting from an intrusion.

- Dimensions

Without switch box mount

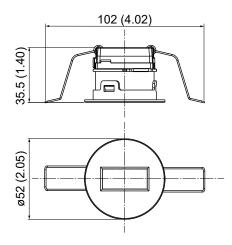


With 86-type box mount

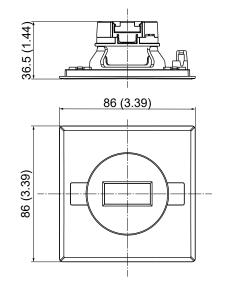

Unit: mm (inch)

- Detection area




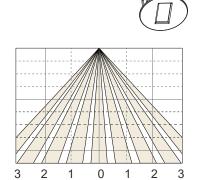

0

L

3'3" 6'7" 10')

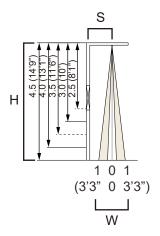

Maximum detection area

Mounting height (H)	2.5	3.0	3.5	4.0	4.5
	(8' 2")	(9' 11")	(11' 6")	(13' 1")	(14' 9")
Area depth (W)	0.6	0.7	0.8	0.9	1.0
	(2')	(2' 4")	(2' 7")	(2' 11")	(3' 3")
Area width (L)	3.3	4.0	4.6	5.4	6.0
	(10' 10")	(13' 1")	(15' 1")	(17' 7")	(20')
Recommended distance to the wall (S)	0.7	0.8	0.9	1.0	1.2
	(2' 4")	(2' 7")	(2' 11")	(3' 3")	(3' 9")

Unit: m (ft., in.)


Wall mount

6'7" 3'3"



Horizontal


Top view 3 (9'11") 2 (6'7") 1 (3'3") 0(0)1 (3'3") 2 (6'7") 3 (9'11") 2 4 4.5 6'7" 9'11" 13'1" 14'9") (0 Side view 3'3"

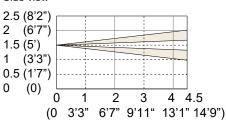


Top view



Vertical

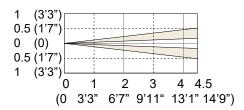

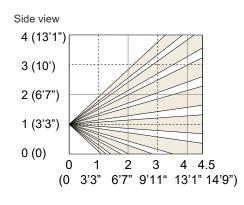

- Troubleshooting

Problem	>	Cause	brack	Solution
The LED is off.	\setminus	The power supply voltage does not meet the requirement due to disconnection from the power supply or low voltage.	$\left \left \right \right $	Check the power supply of the detector. Refer to "Specifications" on the page 9 for the power supply voltage.
	/	Incorrect detection area.	k	Adjust the detection area. Refer to "Detection area" on the page 10.
The LFD is on even there is no	/	A moving object exsts in the detection area, such as a fluttering curtain or a swinging wall-mounted pendant.	k	Remove the moving object from the detection area or change the detector location.
person in the detection area.	/	The temperature changes rapidly in the detection area due to a heat source, such as a radiator or air conditioner.	$rac{1}{2}$	Remove the heat source fron the detection area or change the detector location.
The LED is on but the detector	\	Relay contact abhesion or damage occurs due to overload.	$ \mathbf{k} $	Check the output load. Repair or replace the damaged part.
does not transmit signals.	/	Improper wiring.	$\left\{ \right.$	Connect the wires for the detector correctly.
The detector fails to warm up in 60 seconds after power on and	\	A moving object exista in the detection area during the warm-up period of the detector.	brace	Be sure that there is no moving object in the detection area during the warm-up period of the detector.
the LED blinks continuously.	/	The detector fails to work properly.	\mathbb{Z}	Repair or replace the detector.

- Compliance





https://navi.optex.net/cert/contact/



OPTEX INC./AMERICAS HQ (U.S.)
www.optexamerica.com

____.

OPTEX (EUROPE) LTD./EMEA HQ (U.K.) www.optex-europe.com

OPTEX SECURITY B.V. (The Netherlands) www.optex-europe.com/nl

OPTEX CO., LTD. (JAPAN) www.optex.net

OPTEX SECURITY SAS (France) www.optex-europe.com/fr

OPTEX SECURITY Sp.z o.o. (Poland) www.optex-europe.com/pl

OPTEX PINNACLE INDIA, PVT., LTD. (India) www.optexpinnacle.com OPTEX KOREA CO.,LTD. (Korea) www.optexkorea.com

OPTEX (DONGGUAN) CO.,LTD. SHANGHAI OFFICE (China)

OPTEX (Thailand) CO., LTD. (Thailand) www.optex.co.th

Copyright (C) 2022 OPTEX CO.,LTD.