IST VIEW
App Setup Manual

Home Security Begins with IST View

Contents

1. Download IST app

The IST View app will walk you through setting up and managing all of your security needs. Search for 'IST View' in the Google Play store for Android or the Apple store for iOS.
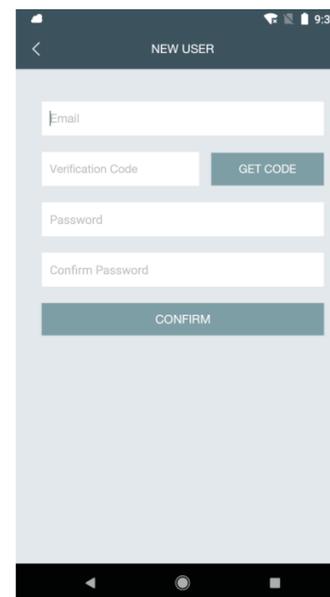
2. WiFi setting

Note:
1). Router Band--This IP indoor monitor will only connect to the 2.4GHZ band. If you have a dual-band router, you must create unique SSID for the 2.4GHZ and 5GHZ bands. Prior to initiating the syncing process, make sure your device is connect to the 2.4GHZ SSID.
2). Router b/g/n --This IP indoor monitor works on 802(b/g/n) network.

Grab your Wi-Fi password
It's required for the in-app setup.
Write it down below so it's handy when you need it;

Your Wi-Fi password
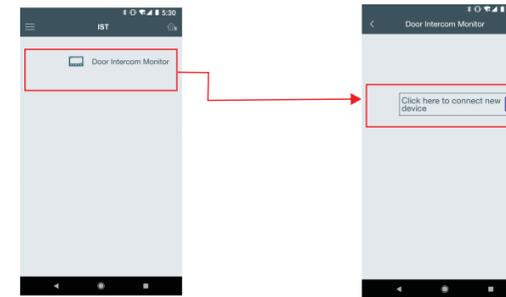
2.1 Sign up an account

User name is your available email account.

Password requires at least 8 characters and contains an uppercase letter, a lowercase letter, and unsupported special symbol.

3. Set up IP Indoor Monitor
Step 1. Login the IST app

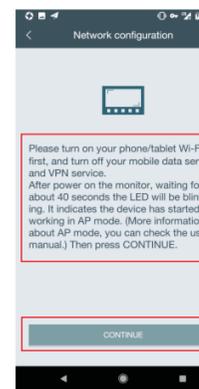**Step 2.** Connect your smart-phone to the WiFi which you want the IP indoor monitor to be connected to.

Step 3. Add New Device

New is if the indoor monitor is a new device which hasn't been connected to a router before.

EXISTING is if the indoor monitor has been connected to the current router, please choose "EXISTING".

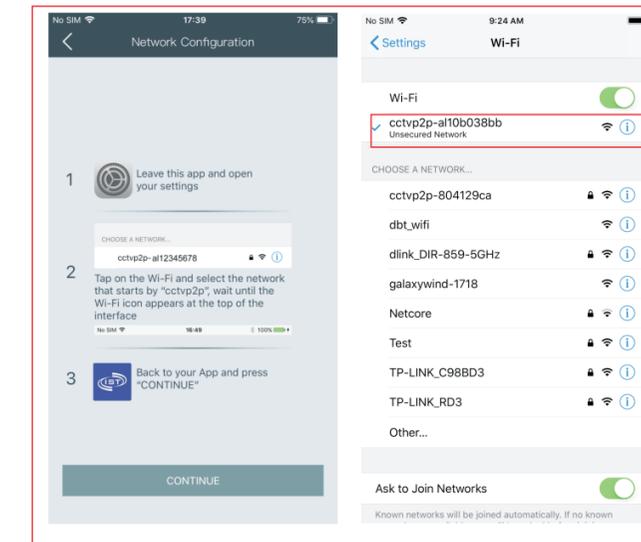### Step 4. Into AP mode

Note:
AP mode is only available for 7-inch indoor monitor.
Into AP mode by manual: Through the menu "System-> Network->Enter AP mode" on the indoor monitor, it will reboot and wait for LED flashing then AP mode ready.

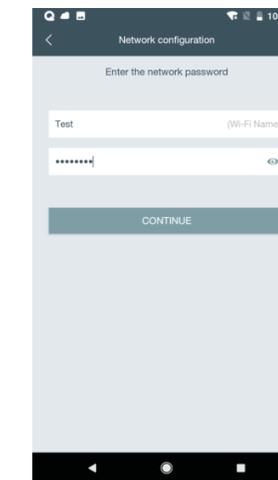For some models, please refer to the actual user manual to enter into AP mode.

Step 5. Connect to indoor monitor hotspot

a. For android, it can be connected to the indoor monitor hotspot automatically.
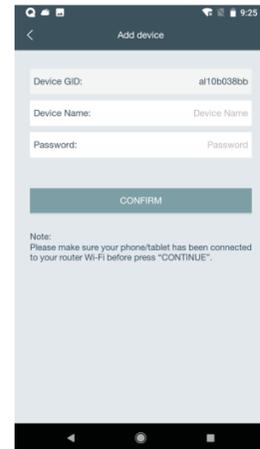
b. For IOS, you need connect manually.

IOS

Step 6. Connect to WiFi router

WiFi setup
select the network you want the IP indoor monitor to be connected to.

Step 7. Add the indoor monitor

Name
is the device name for your IP indoor monitor.

Password
is the device password for login your IP indoor monitor.
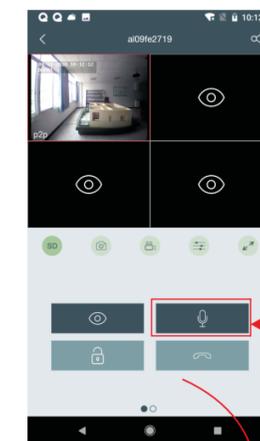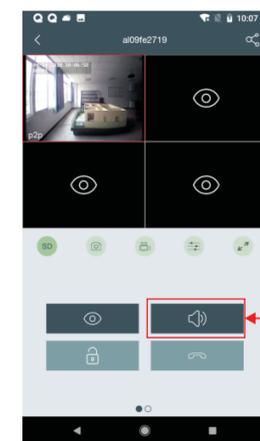The default password is "888888."

Gray: Offline

Green: Online

Cloud(Only for the master)
is for cloud storage service.

System setting
more advance setting.

Delete
remove device.

3.1 The icons on live view

To view only one channel once.

Touch to switch during talk back

Swipe left

SD Quality switch:HD/SD

Snapshot

Record/Stop record

Adjust volume of speaker/Microphone

Video full screen display

Connect/disconnect view

Talk back, semi-duplex communication.
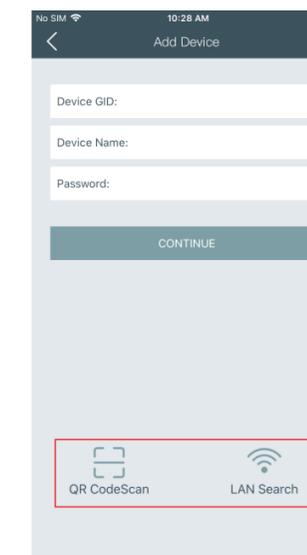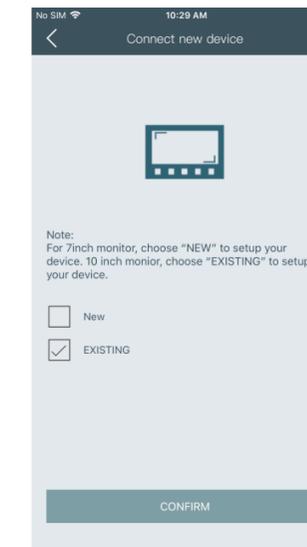Hear the sound from the outdoor bell.

The Microphone, transfer the sound to
the outdoor bell.

Unlock

Hang up

Share device account
One device have one master, the account that added the device
first will be the master, and can share the device to other users.

3.2 Add Existing Device

Name
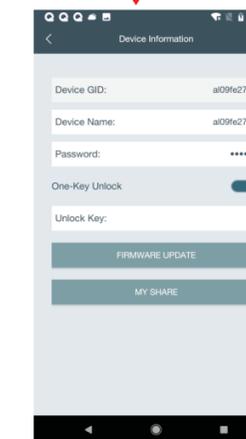is the device name for your IP indoor monitor.

Password
is the device password for login your IP
indoor monitor.
The default password is "888888."

QR Code Scan
for your indoor monitor QR code.

LAN Search
to search online devices in the same
WIFI network.

3.3 System Setting

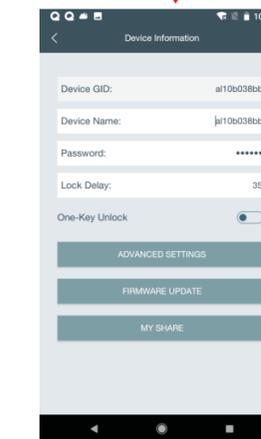**10 Inch Monitor (V510)**   **7 Inch Monitor (V500)**

Lock Time
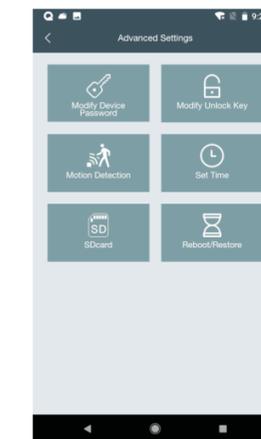User can adjust unlock time for visitor calling, and values can be set from 1 to 10s.

One-Key Unlock
After turn on this switch, no need enter unlock password every time by visitor press "CALL".

Unlock Key
is the password for unlock.

3.4 Advance setting--For 7 Inch Indoor Monitor (V500 System)

Note: For some 7 inch models, there is no advance setting menu, please check actual model.

Modify Device Password
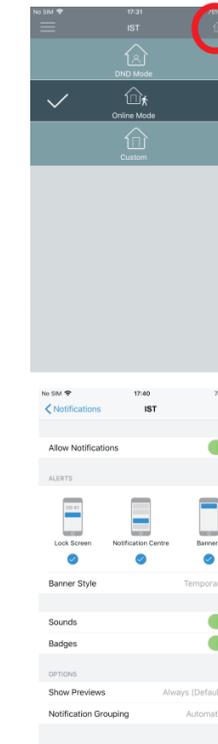
Modify Unlock Key

Motion Detection
only one channel can enable motion detection
alarm function every time.

Set Time
Sync indoor monitor time with your phone.

SD card
For SD card storage

Reboot/Restore

3.5 Push Mode

DND mode
is turn off all devices push function.

Online Mode
is turn on all devices push function.
app system default is away mode.

Custom Mode
to optional control device push function.

Note:
For the phone with iOS system, please go into "**Settings-> Notification Center->IST**" to turn on all the push notifications enabled.

3.6 Account

Media
local storage.

Setting
setup notify mode and screen display mode..

About
app firmware version.