

**Instruction / Installation Sheet**  
**1 x 8 Telephone Module**  
**Part # 80-0070**

**Wiring Diagram:**


**Tools Required:**

- Impact Punch-Down Tool with 110 Blade

**Installation:**

- Align the mounting pins of the Telephone Module with holes in the back of your Telecommunication Enclosure and lock Telephone Module into place.
- Install the cable from the telephone company demarcation point to the 110 IDC connector marked LINE IN.
- Install twisted pair cables from each location in the house to the remaining 110 IDC connectors. Match the color-coding of the wires to the colors on the 110 IDC connectors.
- The wires should be punched down to the 110 IDC connectors using an industry standard punch-down tool. Use the T568A wiring configuration as shown above.
- Line 1 is Blue, Line 2 is Orange, Line 3 is Green and Line 4 is Brown.

**NOTE:** The RJ31x port is used to install the security line.

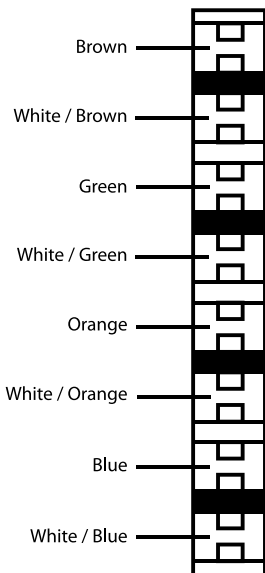

**CAUTION:**

- Never install low voltage wiring during lightning storms.
- Never install low voltage wiring in wet locations unless the wire is specifically designed for wet locations.
- Never touch un-insulated low voltage wires or terminals unless the wire has been disconnected at its source.
- Do not use this product near water. For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool.
- Consult and comply with local building and electrical codes, before and during installation of any equipment.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltages.
- Use caution when installing low voltage cables.
- Read and understand all instructions.
- Save these Instructions.

**NOTE: Only Licensed Professionals Should Install this Product.**

