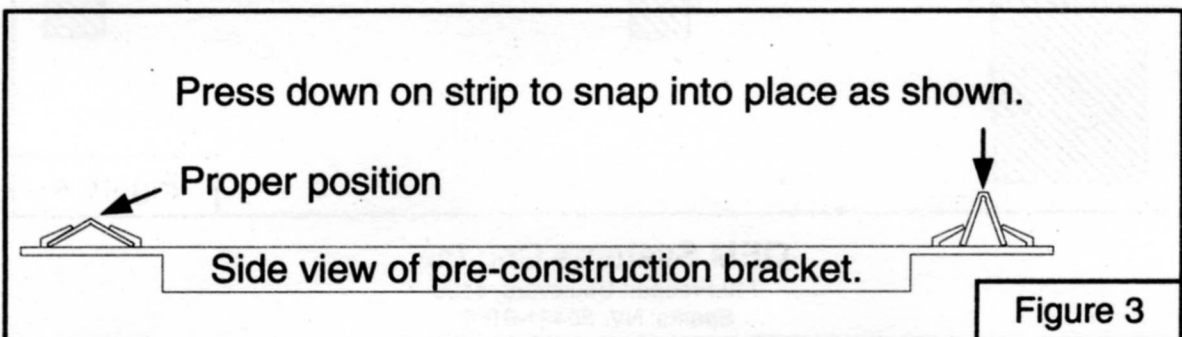
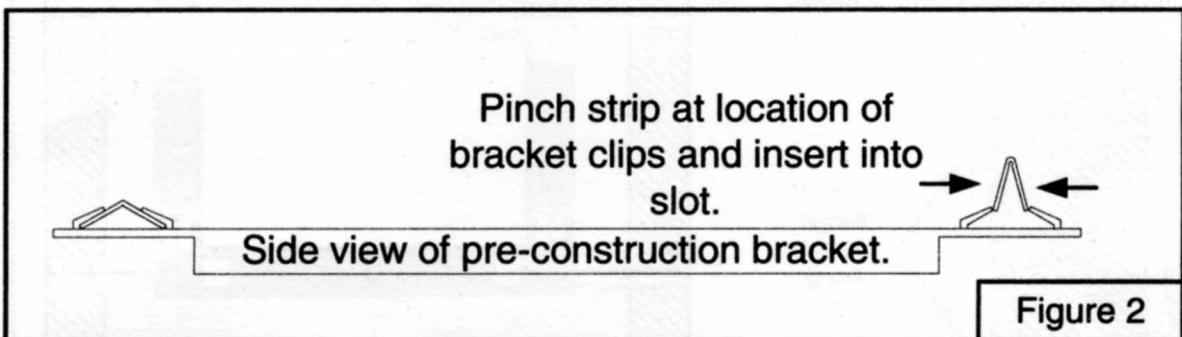
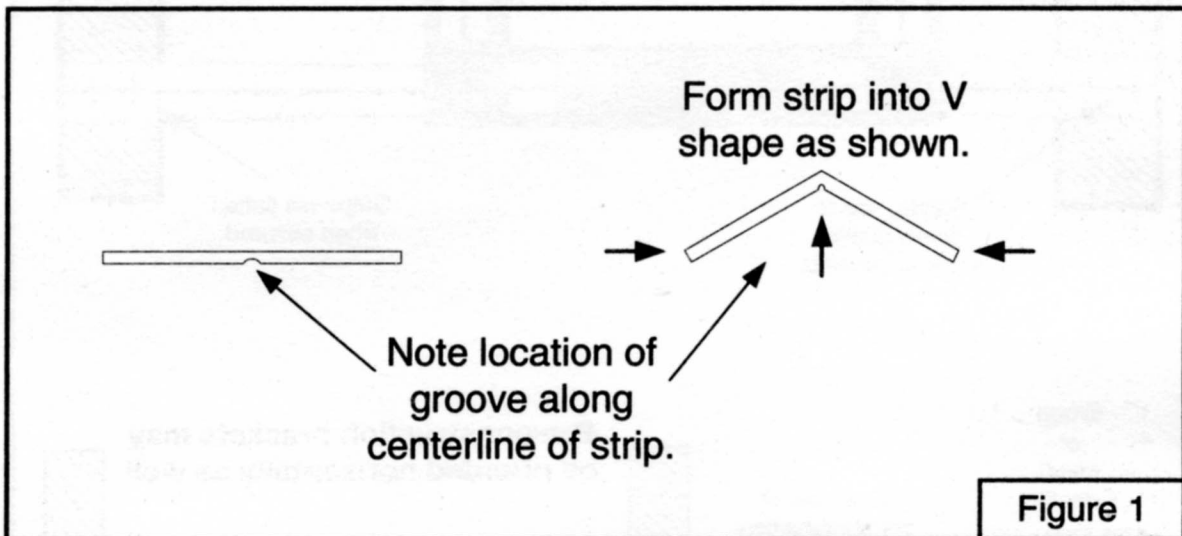


Installation Instructions for the RIB Series

Pre-Construction Brackets for Rectangular Speakers

1. Crease strips and insert into bracket clips. (Figures 1, 2 & 3).
2. Attach pre-construction brackets to framework. (Figure 4).
3. Slide bracket into position along strips.
(Marks are provided to measure centerline of speaker bracket).
(Bracket should not overlap framing).



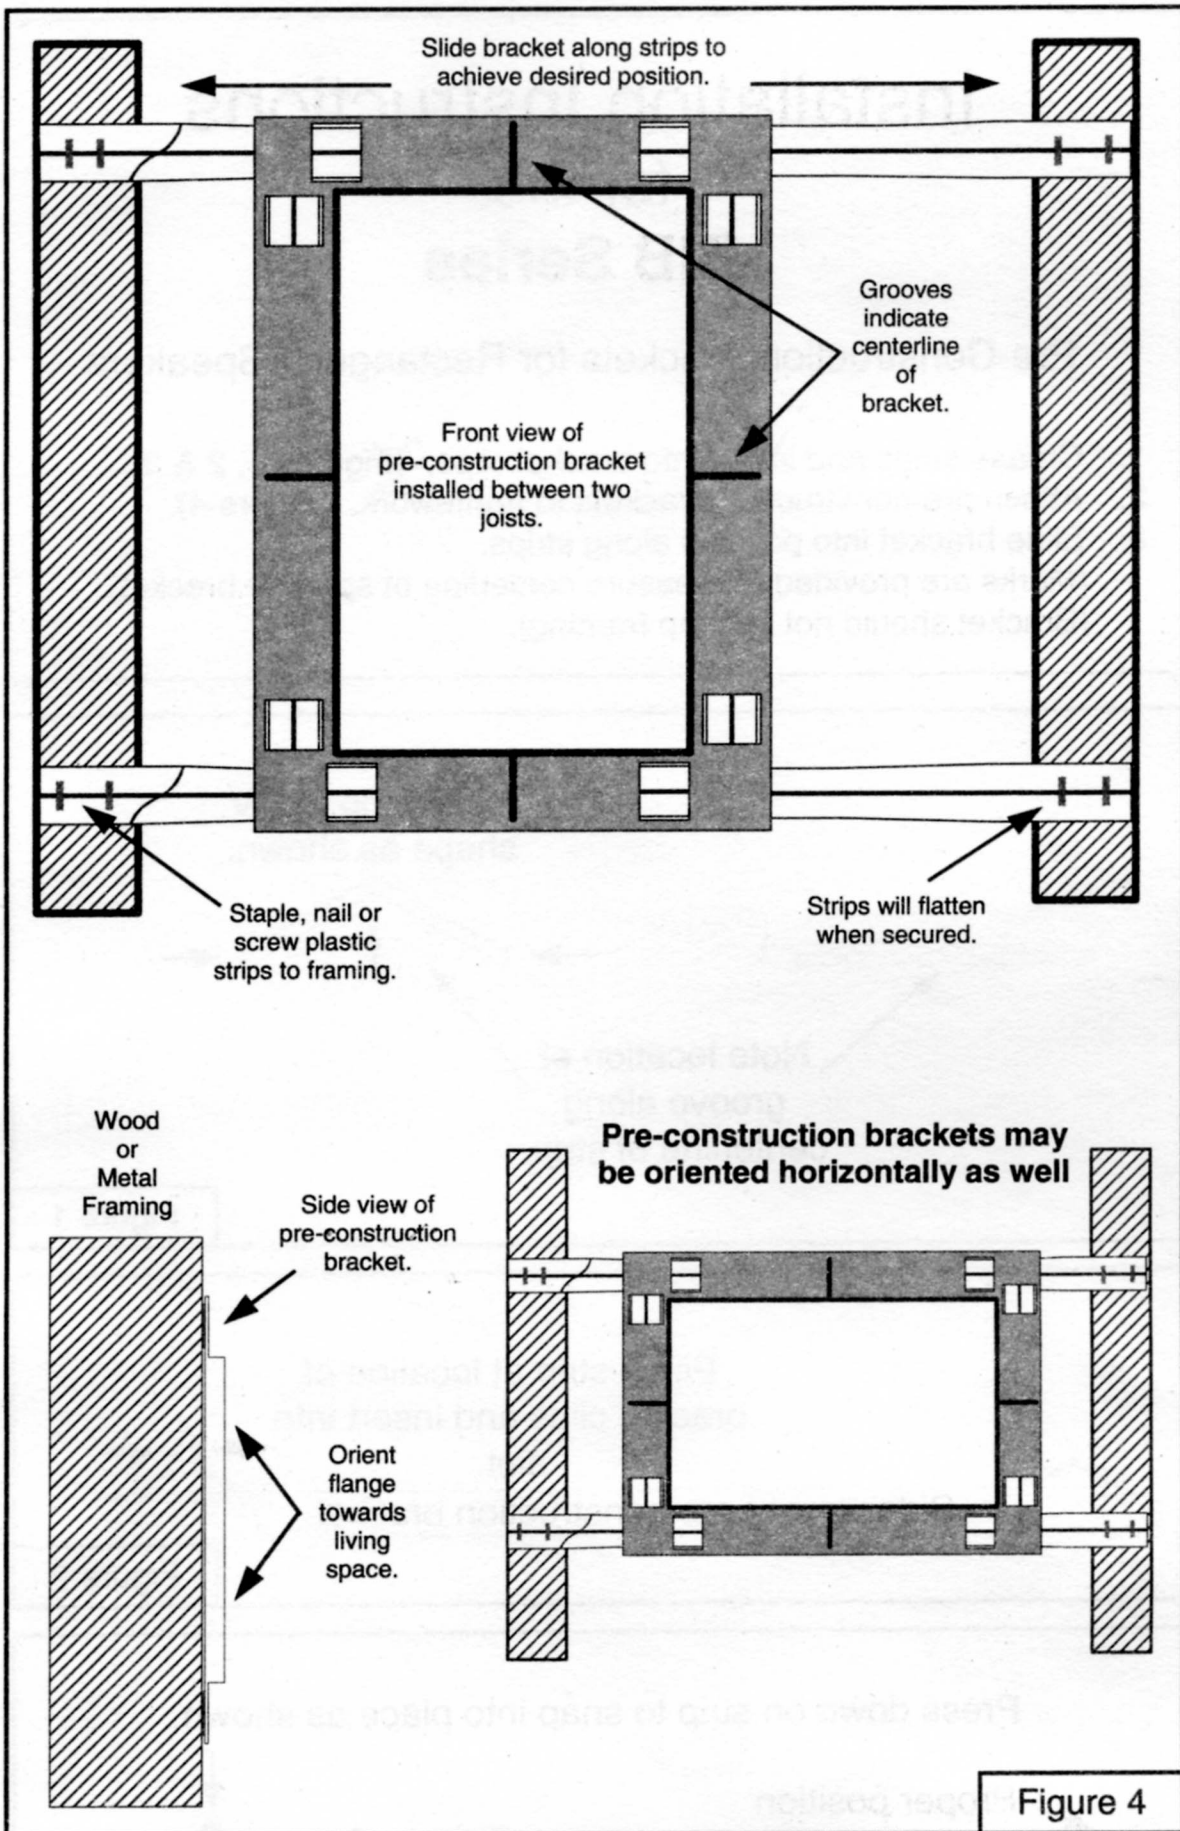


Figure 4

OEM Systems Co., Inc.

740 Freeport Boulevard, #106

Sparks, NV 89431-6168

(775) 355-0405 fax: (775) 355-0646

www.oemsystems.com info@oemsystems.com

Product materials & specifications are subject to change / improvement