


## Installation for the Universal Receiver UR-100

---

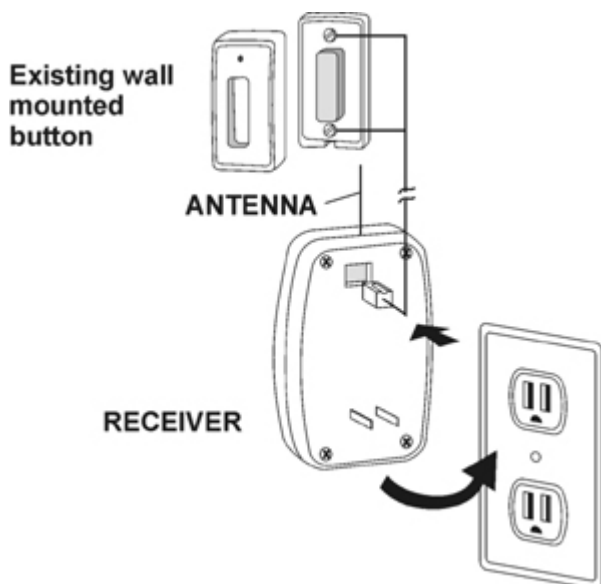

1. Plug in the UR-100 into an electrical outlet inside the garage.
2. Connect a wire (included with the UR-100 kit) from the UR-100 to the existing garage door push button.
3. Set the DIP switches of both the Skylink transmitter and UR-100 so that their DIP settings match each other in order for them to communicate properly.
4. Refer to the UR-100 user's instruction, set the operation frequency and/or brand jumper setting for the Skylink transmitter.
5. All Done!