


MIMOLite installation instructions for Vera Controllers rev. 3May2013

Link: <http://wiki.micasaverde.com/index.php/MIMOLite>

The MIMOLite device supports multiple functions. This plugin adds 3 child devices that can be used in scenes and triggers like a normal device. To fully support MIMOLite in VERA the following steps are required:

- Make sure you have at least version 1.5.622 on your unit
- Go to Apps -> Install Apps
- Login if needed
- Search for "MIMOLite" and install it
- After the plugin is installed a new generic device will be installed

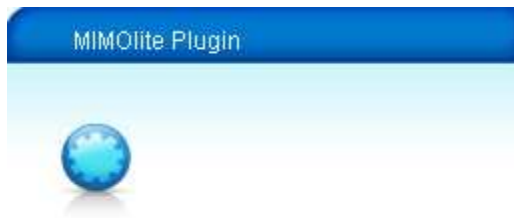

Go to the Advanced tab and locate the **MIMO_Devices** variable

MIMOLite Plugin

Room: no room

Control Settings **Advanced** Device Options

id	302
room	0
time_created	1367504179
plugin	3816
impl_file	I_MimoSensor.xml
onDashboard	1
local_udn	uuid:4d494342-5342-5645-012e-00

Variables

<u>MIMO_Devices</u>	300,3
LastUpdate	0
New service:	
New variable:	
New value:	

Add

- Fill in the Device #ID of the physical MIMOLite device, which you already included in the network
- New child devices will be created which you can use in scenes and triggers

Mimo #3 generic sensor...	Mimo #3 pulse meter	Mimo #300 binary sensor...	Mimo #300 generic sensor...	Mimo #300 pulse meter
 <p>Level 0</p>	 <p>Watts KWH</p>	 <p>Arm Bypass</p>	 <p>Level 0</p>	 <p>Watts KWH</p>