



INSTALLATION INSTRUCTIONS

Motion Sensor
Model: PS-MT




Congratulations on your purchase of the Skylink Motion Sensor, Model: PS-MT. The sensor will monitor any movement around your premises and works with the SkylinkNet Internet Hub and the Skylink M-Series Alert/Alarm System.

Section 1 - Insert a battery in the Motion Sensor




NOTE: The battery for the Sensor is not included. Please refer to instruction below to insert an AA Alkaline Battery.

1. Use a coin to open the Motion Sensor cover.

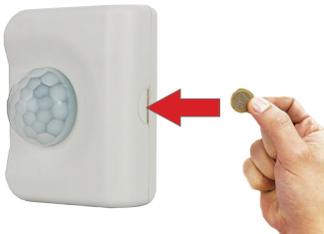

2. Insert an AA Alkaline Battery.

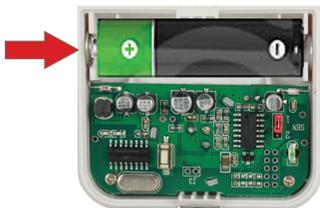

Safety Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interferences that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE - DECLARATION OF CONFORMITY:

This equipment complies with the requirements relating to electromagnetic compatibility, EN 301489-1, EN301489-3, EN300220-1, EN300220-2 and EN60950-1. This equipment conforms to the essential requirement of the 1999/5/EC R&TTE Directive.

Package Contents



Parts	Description	Quantity
A	Motion Sensor	1
B	Mounting Accessories	1

Section 2 - Programming the Sensor with M-Series Main Console



NOTE: You can program in total up to 4 sensors in one zone. If you try to program the fifth sensor, the first sensor will be removed.

1. Press the learn button on the back of the M-Series Main Console for 3 seconds until the Zone 1 light is flashing.



1. Press the learn button on the back of the M-Series Main Console for 3 seconds until the Zone 1 light is flashing.



3. Open the Motion Sensor cover with a coin and press the learn button.

2. Zone 1 is selected. Press the learn button to select the zone you want to program the sensor.



2. Zone 1 is selected. Press the learn button to select the zone you want to program the sensor.




4. Once the sensor is programmed, the Main Console will beep once and the corresponding zone led will be off.


Section 3 - Programming the Sensor with SkylinkNet Internet Hub



NOTE: Programming the sensor with the SkylinkNet Internet Hub must be done from the SkylinkNet App.

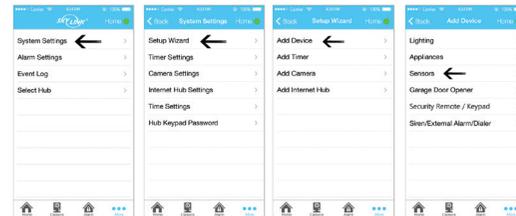

1. Go to "More" and tap on "System Settings". 2. Tap on "Setup Wizard". 3. Tap on "Add Device". 4. Tap on "Sensors".

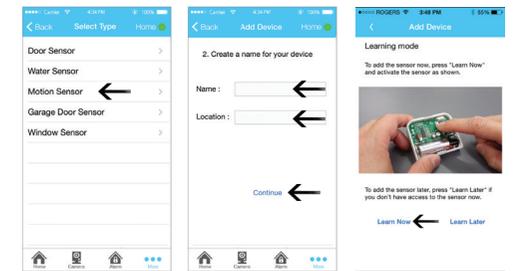


5. Tap on "Motion Sensor".

6. Name your Sensor, location and tap "Continue".

7. Tap on "Learn Now" and follow the video to activate the sensor.

Section 4 - Testing the Sensor with M-Series Alert/Alarm System

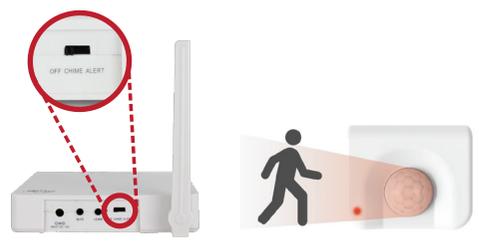


- Slide the switch at the back of the Main Console to Alert Mode.
- Move in front of the motion sensor to trigger the sensor. The Led will flash when motion is detected.




- The Main Console will start beeping and flash the Zone LED.
- The motion sensor will stop beeping and flashing the LED if there is no motion detected for 15 seconds.

Section 5 - Testing the Sensor with SkylinkNet Alarm System

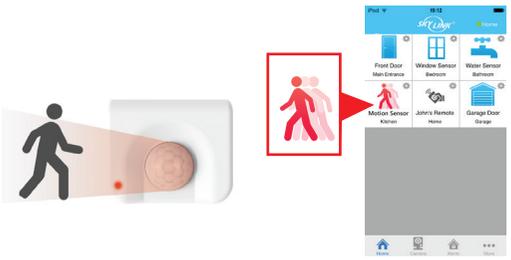


- Activate the sensor by moving in front of the motion sensor. The Led will flash when motion is detected.
- The blue icon will turn red indicating that the motion is detected.

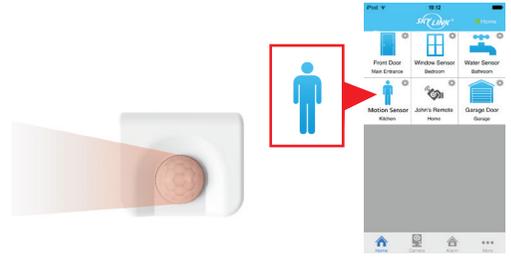

- Don't move in front of the motion sensor for 15 seconds.
- The red icon will turn back to blue indicating that there is no motion detected.

Section 6 - Installing the Motion Sensor

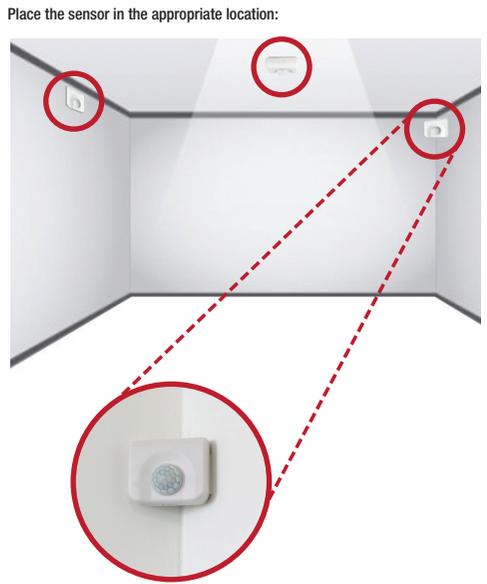

Place the sensor in the appropriate location:

The motion sensor can be mounted with a double-sided tape or screws in a corner, straight wall, ceiling or stand freely by itself.

Section 7 - Battery Indication/Sensor Failure M-Series Alert/Alarm System

NOTE: The corresponding zone LED in the Main Console will flash if a sensor failure or low battery is occurred.

When a sensor failure occurs, try the following:

- Check if the sensor is located at where it should be.
- Check if there is any physical damage to the sensor.
- Move the Main Console closer to the sensor, if the red LED stops flashing, that means the Main Console or sensor needs to be relocated.
- Replace the battery of the sensor if the Main Console does not respond when the sensor is activated within short range.

Troubleshooting M-Series Alert/Alarm System

Problem	Solution
The M-Series Main Console panel does not respond to the sensor?	- You must program the sensor to the control panel before they can work together.
Can I erase just one sensor from a zone in the M-Series Main Console?	- You must erase all the sensors in that zone and then program the sensor you want to keep.
I have multiple sensors in a zone and the zone LED keep flashing indicating a sensor failure. How do I know which sensor is having the problem?	- You need to test each sensor individually.

Warranty

ONE YEAR WARRANTY

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 1-800-304-1187 for repair or replacement parts. Guarantee does not include normal wear and tear or batteries.



If you have any questions, problems or missing parts, please call Skylink Customer Support: 9:00am - 5:00pm EST, Monday-Friday.

1-800-304-1187

Or e-mail us at support@skylinkhome.com

www.skylinkhome.com

CUSTOMER SERVICE
17 Sheard Avenue,
Brampton, Ontario,
Canada L6Y1J3

P/N : 101Y144 Rev:0
©2014 SKYLINK GROUP.